
ASSEMBLY INSTRUCTION

BOOTY BUILDER PLATINUM

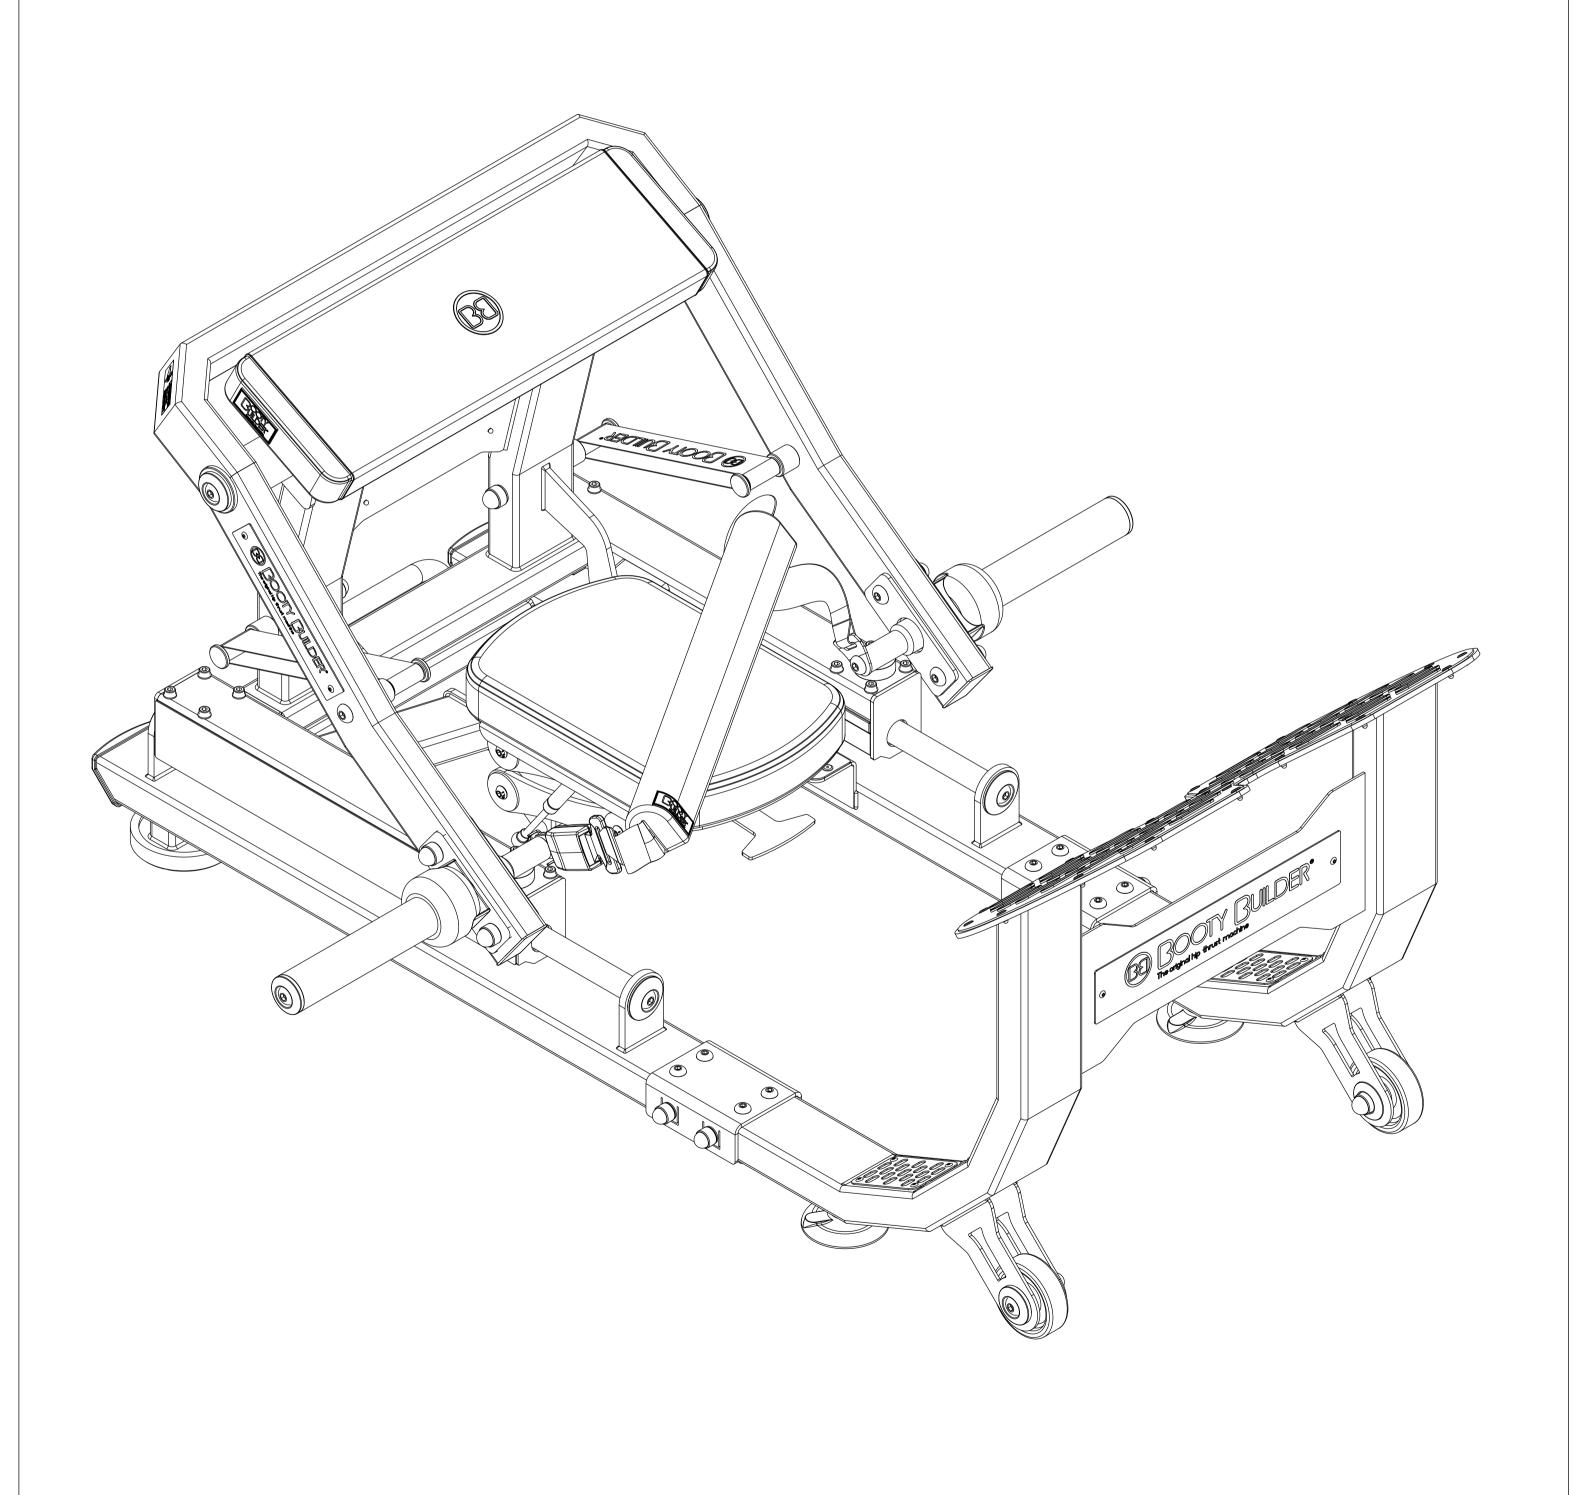

BEFORE ASSEMBLY

- ► This must be read before you start assembling this unit.
- ➤ You must follow the assembly instructions exactly as outlined.
- ► Assemble this unit starting at the beginning and work to the end
- ► The assembly instructions are set out so that you are only doing one section at a time, therefore you will finish one section and move on to the next.
- ► If something is missing when assembling this unit, you must notify us of the part number of the exact nut, bolt of part that is missing.
- ➤ To help you assemble this unit we have used line drawings.
- ► Check the line drawings for the exact positioning of the parts.
- ► The unit will need to be checked at least once a week for nuts and bolts that can work loose, upholstered pieces working loose and wear on pivot assemblies.


TOOLS NEEDED

KEY FLAT EYE 17x2 / 19x1

HEX KEY 5 / 6 / 8




ASSEMBLY INSTRUCTION
Page 2

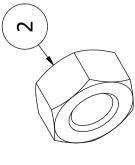


Nut M10 x8




  Self-Locking Nut M10 x2






Pad D10 x4

 


Bolt IMB SPH M10x75 x8

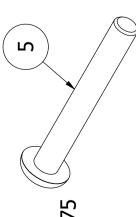


9 Bolt HEX M10x130 x4

Endcap M12 x4

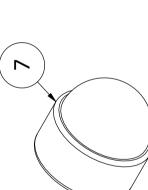


Self-Locking Nut M12 x4

 ∞

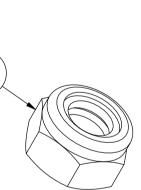

Bolt IMB SPH M12x65 x4

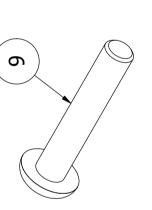

Bolt IMB M6x10 x12

