 




FOLDABLE AQUA ROWER

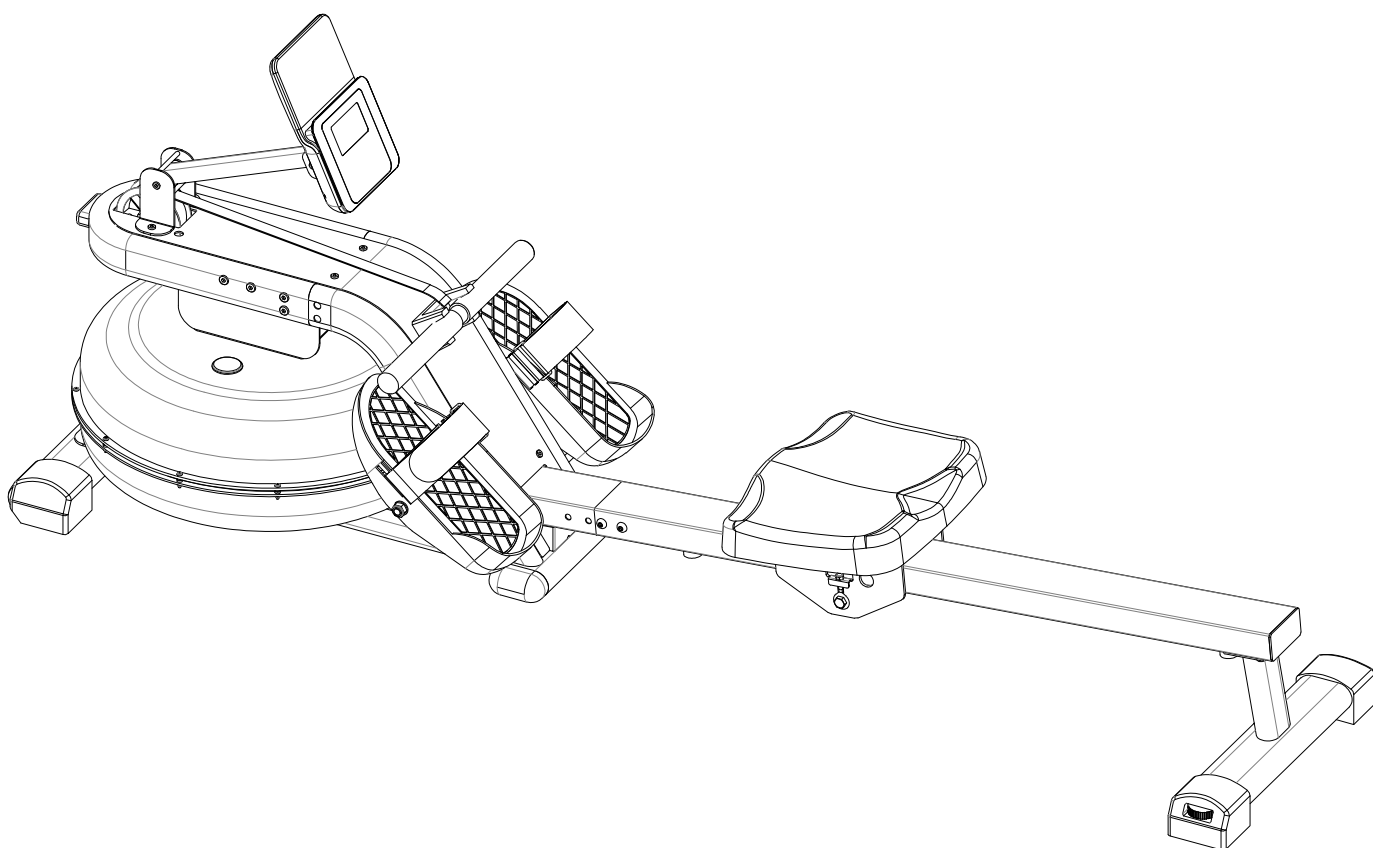

101198

Page 2	Table of content
Page 3-4	Safety Instructions
Page 5	Technical data overview
Page 6	Parts list
Page 7-10	Assembling steps
Page 11-14	Filling the Water Tank
Page 15	Adjusting the Pedals
Page 16-17	Cleaning/Maintenance/Disposal
Page 18	Power Supply
Page 19	Warranty
Page 20-24	Training information
Page 25	Warm-Up/Stretching
Page 26-27	Notes

General information

Please ensure that all persons using the device have read and understood the assembly and operating instructions. The assembly and operating instructions must be regarded as part of the product and kept in a safe place so that they can be referred to at any time if necessary. Ensure that the safety and maintenance instructions are followed exactly. Any use that deviates from these instructions may result in damage to health, accidents or damage to the device, for which the manufacturer and distributor cannot accept any liability.

Personal safety

Before starting to use the device, you should consult your family doctor to determine whether the training is suitable for you from a health point of view. This applies especially to people who have a hereditary predisposition to high blood pressure or heart disease, smoke, have high cholesterol levels, are overweight and/or have not exercised regularly in the last year. If you are on medication that affects your heart rate, medical advice is absolutely essential. Please also note that excessive exercise can seriously jeopardize your health. If you experience any signs of weakness, nausea, dizziness, pain, shortness of breath or other abnormal symptoms during training, please stop training immediately and consult a doctor in case of emergency.

As a general rule, sports equipment is not a toy. Unless otherwise described, the equipment may only be used by one person at a time for training. It may therefore only be used as intended and by appropriately informed and instructed persons. Persons such as children, invalids, physically and mentally impaired persons should only use the device in the presence of another person who can provide assistance and guidance. Suitable measures should be taken to prevent unsupervised children from using the device. It must be ensured that the user and other persons never move or stand with any parts of their body in the area of moving parts.

 
Training clothes and shoes suitable for fitness training with the device must be worn. The clothing must be such that it cannot get caught in the device during training due to its shape (e.g. length). The training shoes should be chosen to match the training equipment, basically give the foot a firm grip and have a non-slip sole.

Assembly

 
 
 
 
 


 

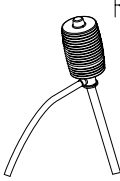 
Check that all parts and tools listed in the parts list are present. Please keep in mind that some parts may be pre-assembled. Keep children and animals away from the assembly area during assembly. Tools, packaging materials (e.g. foil) or small parts may pose a risk of injury or suffocation. Also make sure that you have enough space to move around during assembly. Before using the device for the first time and at regular intervals, check the tightness of all screws, nuts and other connections to ensure the safe operating condition of the device.






Location

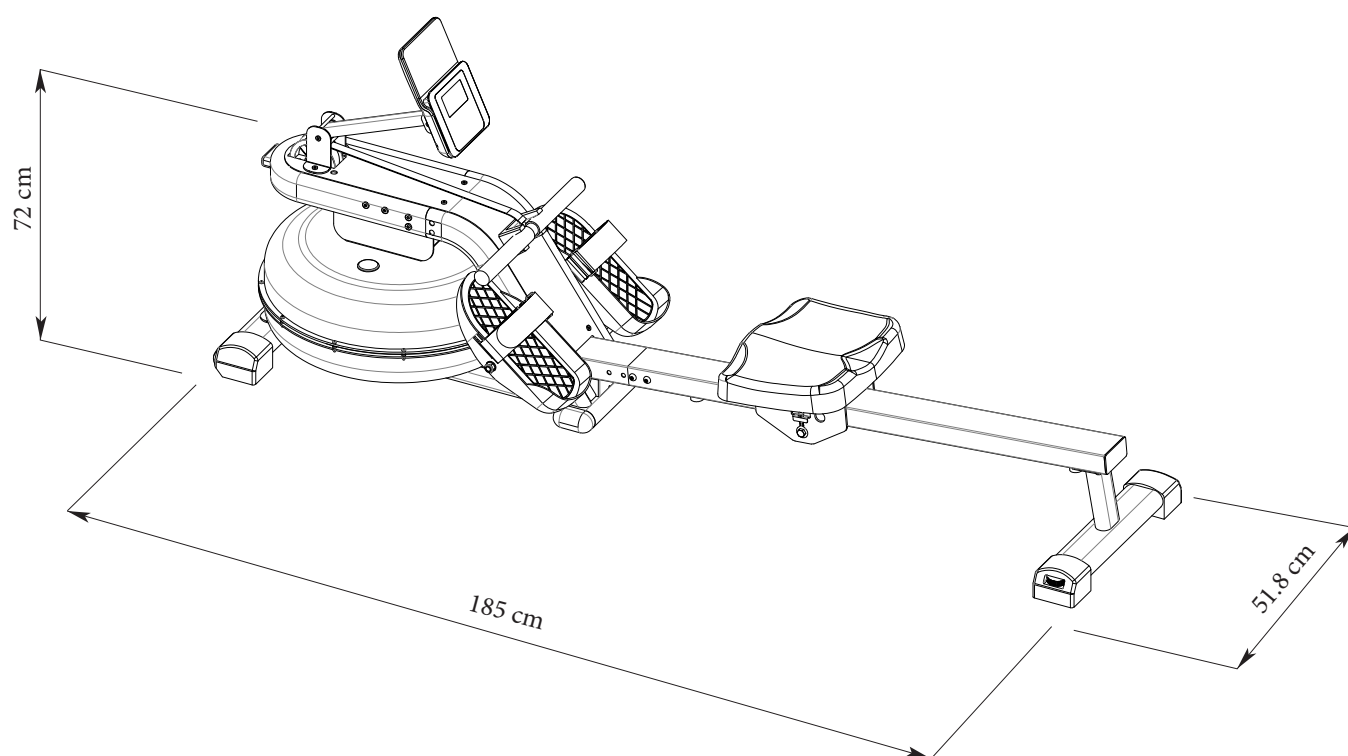Set up the device in a flat, stable and dry place. Uneven surfaces can be compensated by adjustable parts of the device, if available. To protect sensitive surfaces against pressure marks and dirt, we recommend placing a floor protection mat underneath. Please also remove all objects within the required training radius before starting training. Use outdoors or in rooms with increased humidity is not permitted.

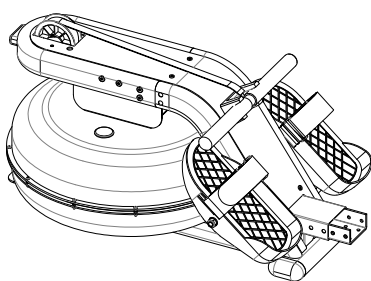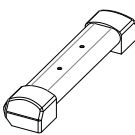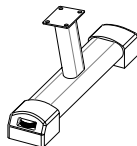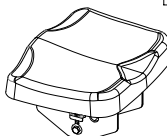

Max. Load: 120 kg

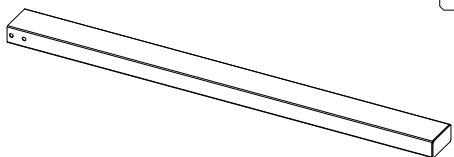 <p>A</p>	 <p>B</p>	 <p>C</p>	
 <p>D</p>	 <p>E</p>	 <p>F</p>	 <p>T</p>
 <p>G</p>	 <p>H</p>	<div>Accessories package</div> <p>I</p>	 <p>R</p>

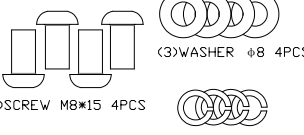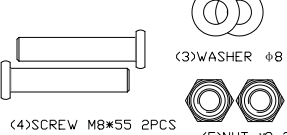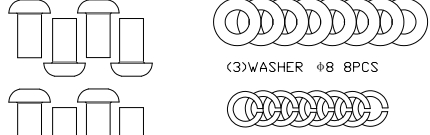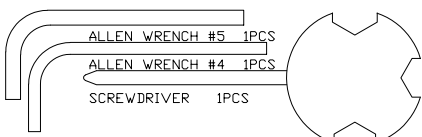     Hardware Kit			
<p>STEP1</p>  <p>(1) SCREW M8*15 4PCS</p> <p>(2) SPRING WASHER ϕ8 4PCS</p> <p>(3) WASHER ϕ8 4PCS</p>	<p>STEP4</p>  <p>(4) SCREW M8*55 2PCS</p> <p>(5) NUT M8 2PCS</p> <p>(6) WASHER ϕ8 2PCS</p>	<p>STEP5</p>  <p>(1) SCREW M8*15 8PCS</p> <p>(2) SPRING WASHER ϕ8 8PCS</p> <p>(3) WASHER ϕ8 8PCS</p>	<p>STEP6</p>  <p>(6) SCREW M6*10 2PCS</p>
 <p>ALLEN WRENCH #5 1PCS</p> <p>ALLEN WRENCH #4 1PCS</p> <p>SCREWDRIVER 1PCS</p>			

STEP 1:

Take out the slide rail(G) and rear feet tube(C), Allen screw M8*15 (1) 4PCS, spring washer $\phi 8$ (2) 4PCS and flat washer $\phi 8$ (3) 4PCS in the component bag. Use a #5 wrench to lock it together.

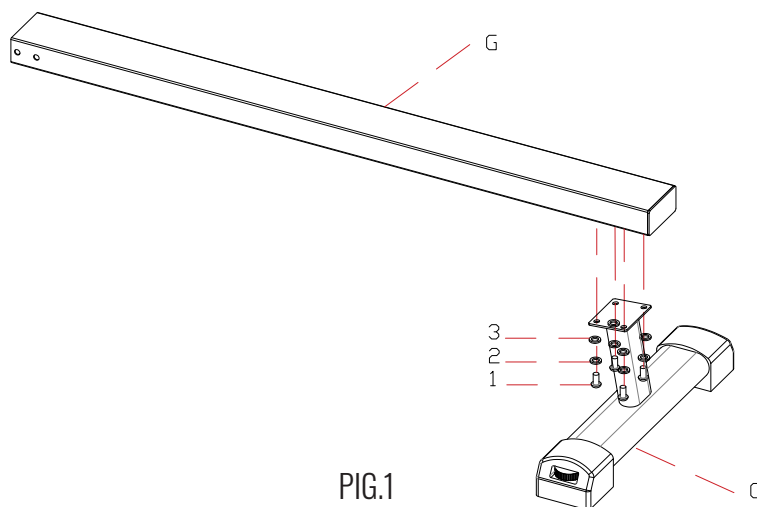 


FIG.1

STEP 2:

Take out the seat set(E) and install it into the slide rail along the arrow direction.


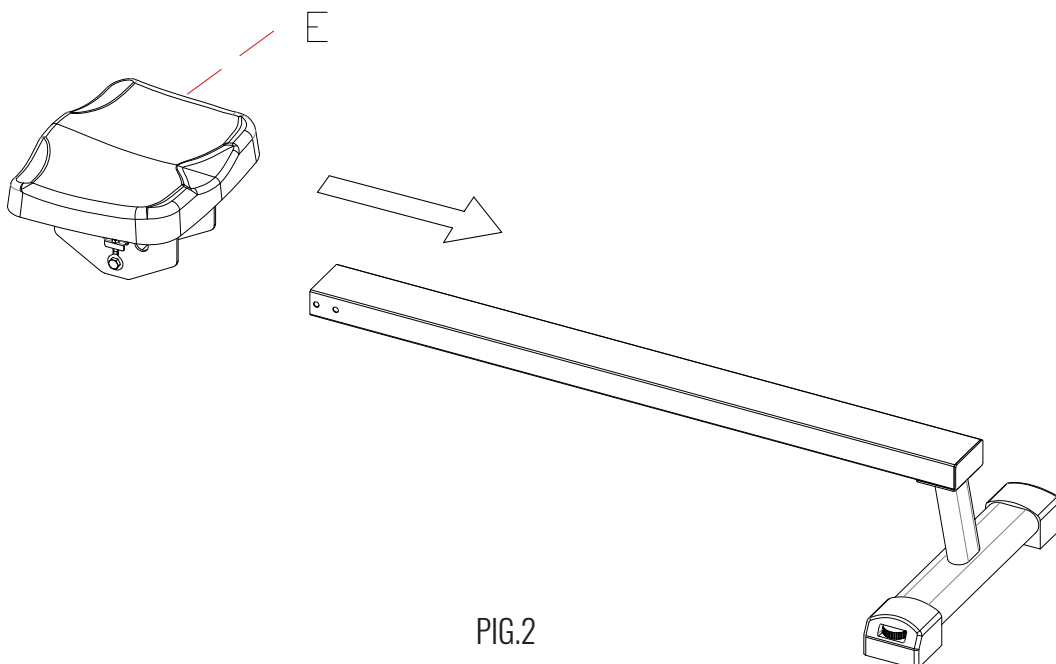 


FIG.2


STEP 3:

 Take out the block for seat cushion(F) and screw it into the slide rail by hand.

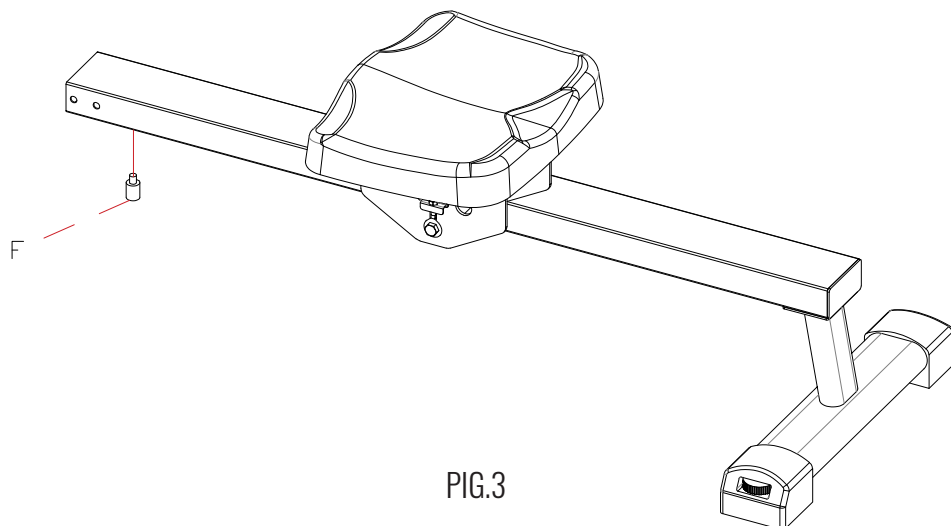

STEP 4:

 Take out the forefeet tube(B), whole rower machine(A), step bolt M8*55(1) 2PCS, washer $\phi 8$ (2) 2PCS and cap nuts M8(3) 2PCS in the component bag. Use #5 wrench and cross wrench to assemble it as shown in FIG.4.

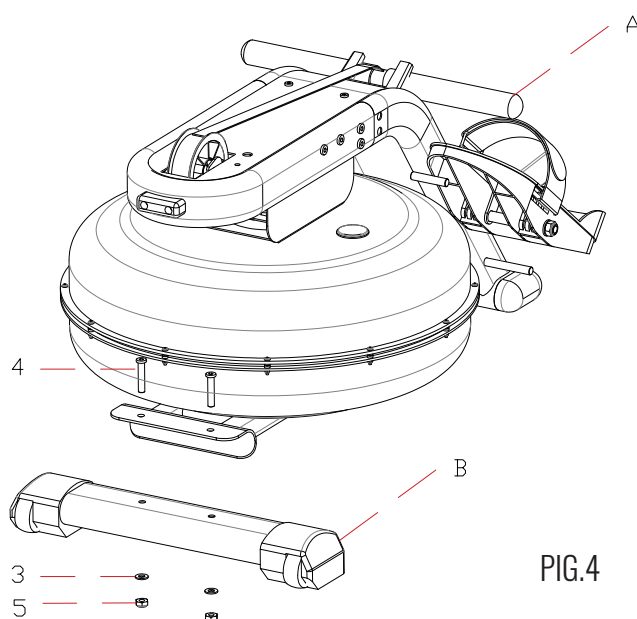

STEP 5:

Take out the Allen screw M8*15 (1) 8PCS, spring washer $\phi 8$ (2) 8PCS and flat washer $\phi 8$ (3) 8PCS from the component bag. Use a #5 wrench to lock the assembly (G) assembled in step 3 and the assembly (K) assembled in step 4 together.

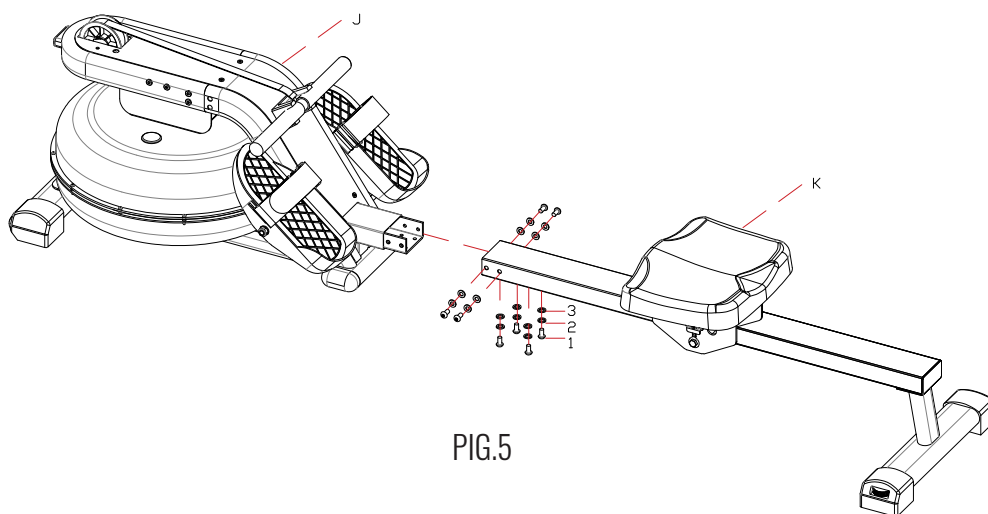 


FIG.5

STEP 6:

Take out the Allen screw M6*10 (6) 2pcs from the component bag. Use #4 wrench to lock the console holder (D) into the whole rowing machine as shown in FIG.6


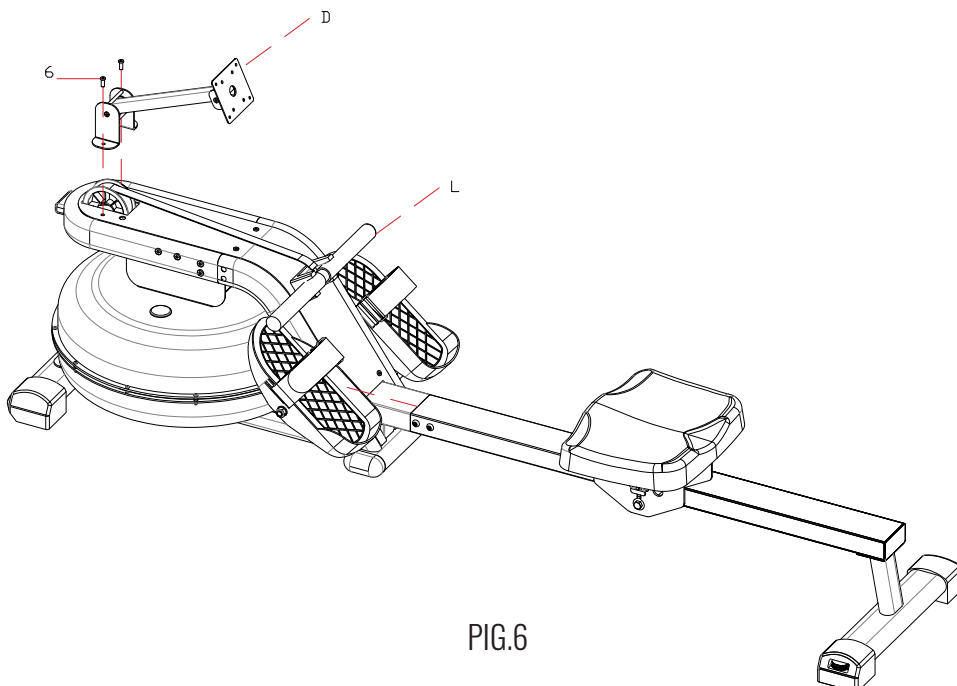 


FIG.6

STEP 7:

Use a cross wrench to take out the cross pan head screw M4*10 (7) and flat washer $\varphi 4$ (8) that pre-locked on the console (H). Install the console(H) on the rower as shown in the FIG.7. Note: The outlet wire(N) of the console and outlet wire(M) of the console holder should be connected and placed according to the method of FIG.1 to avoid pressing the wire.

 (2) Main frame outlet (P) and console holder outlet (O), please connect according to FIG.2.

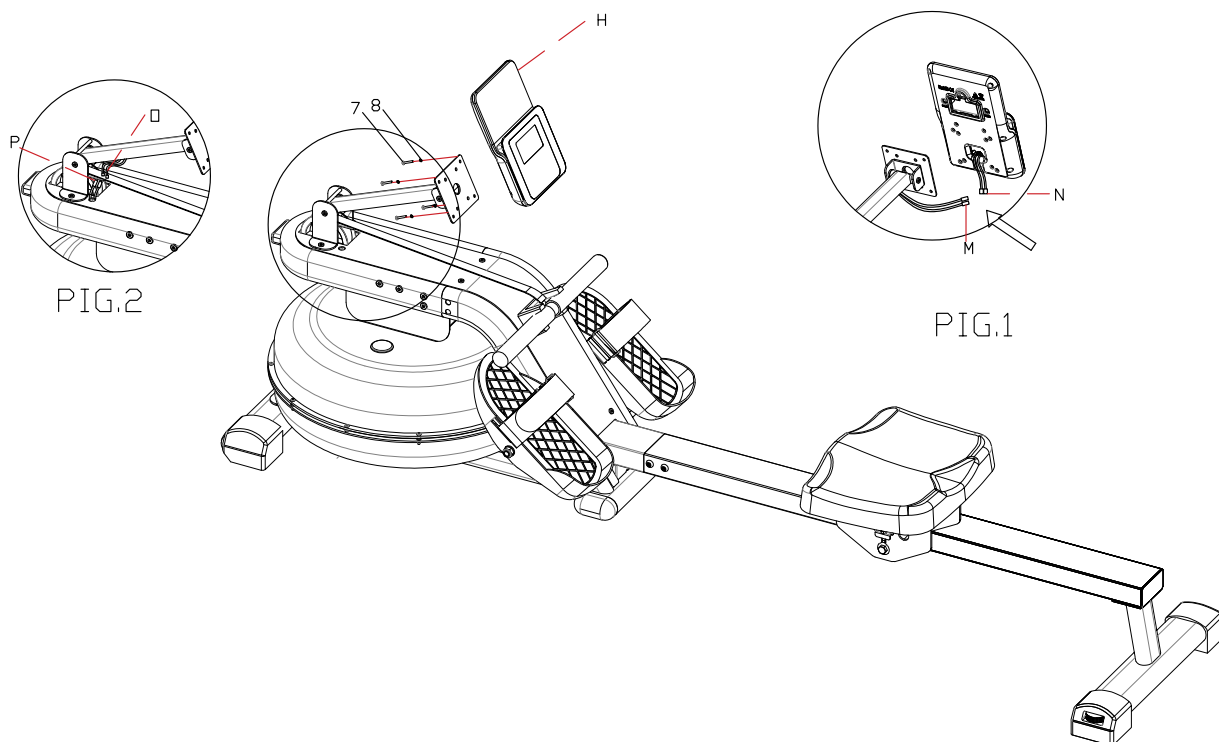

There is of course a direct link between rowing and the element of water. The **Foldable Aqua Rower** is therefore the ideal training device on which to implement your rowing training realistically as it provides a realistic simulation of rowing on water.

The user work load is regulated by the user themselves. Rowing speed is determined by number of rowing strokes per minute and the pulling power. To increase or decrease the speed of the rowing boat, the rower must increase or decrease the pulling power and or the number of strokes per minute. This way the user can adjust their rowing training according to their own current fitness level. Even your form on any particular day can determine the work load.

The advantage of rowing above other types of endurance sports is that it uses almost 80% of all body muscles and the calorie consumption with rowing is significantly higher.

Water Tank

The resistance when rowing with the **Foldable Aqua Rower** is created by water. The water tank needs to be filled for this. We recommend using plain tap water for doing this. Tap water contains all the necessary additives to avoid any build-up of algae. These additives have been removed from distilled or any otherwise purified or filtered water which could cause a build-up of algae in the water in the short or mid-term. After filling immediately add a water treatment tablet to the tank. Do not at any time use any chlorine bleach or chlorine used for swimming pools. This can damage the device tank. Replace the water in the tank every 6 months and add a water treatment tablet to the tank each time you do this.

Water Tank Display and Filling Amount

 
On the water tank there is a water level scale showing 6 different levels of filling. The amount of water filled simulates or changes the relative weight or size of the boat. The filling amount has no effect on the resistance but on the mass which the rower has to move. A smaller filling amount represents then a smaller, lighter boat and the maximum filling amount at level 6 represents a large and heavy boat.

CAUTION:

Please ensure that the current filling level of water never goes below Level 1 or above Level 6. This can cause significant and serious damage to the training device.

Summary of the Filling Levels:

- Level 1 = 8.5 litres
- Level 2 = 9.5 litres
- Level 3 = 10.5 litres
- Level 4 = 11.1 litres
- Level 5 = 11.9 litres
- Level 6 = 12.8 litres

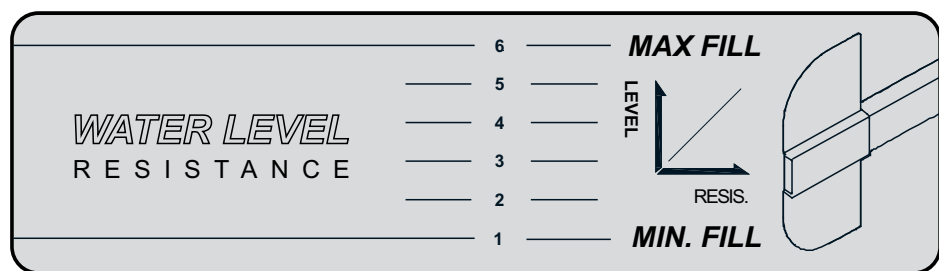

Filling the Water Tank

Step 1: Remove the tank cap.

Step 2: Insert the funnel into the opening of the tank.

 
Step 3: Fill the desired amount of water into the tank.

CAUTION: Do not overfill above the maximum filling level of Level 6 and do not underfill the minimum filling level of Level 1. This can lead to damages to your training device.

Step 4: Add a water treatment tablet to the water in the tank.


Step 5: Close the tank opening by replacing the cap.

Step 6: Check that the cap is fitted correctly and that the water level is being shown. Remove any traces of water which may have been spilled on the device or on the floor whilst filling the tank.

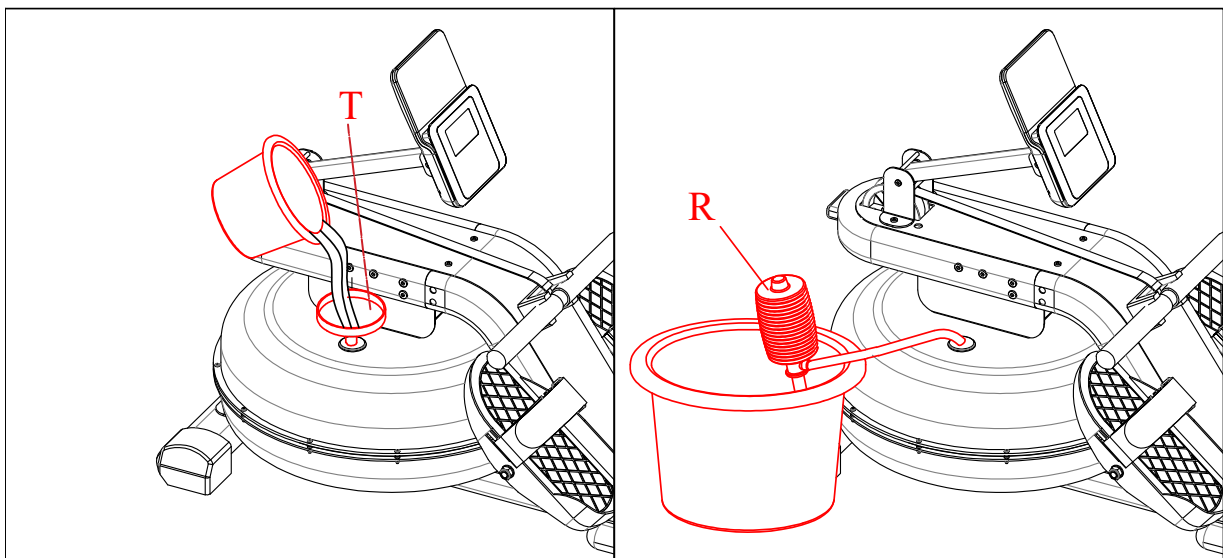

Emptying the Water Tank

 - Step 1:** Remove the tank cap.
- Step 2:** Place a suitable container such as a bucket next to the tank of the rowing device.
- Step 3:** Insert the tube on the pump into the tank and place the hose into the container made available.
- Step 4:** Pump out the water completely or to the water level you require.
- Step 5:** Close the tank opening by replacing the cap.
- Step 6:** Remove any traces of water which may have been spilled on the device or on the floor whilst emptying the tank.

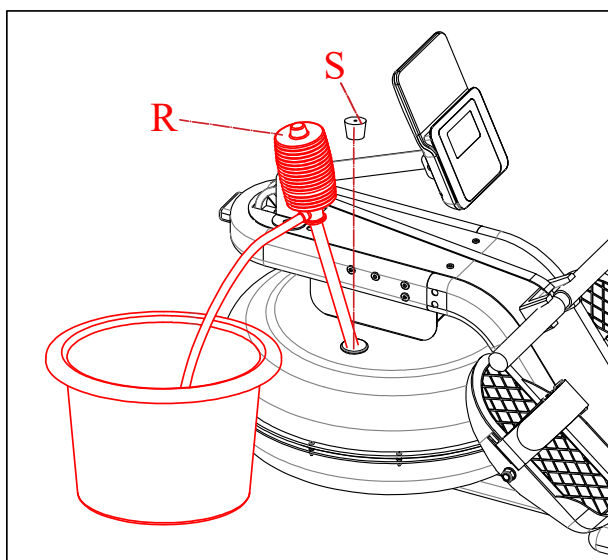

Your rowing machine is equipped with a special support system for your feet.

You should wear suitable sports shoes for rowing training. We recommend running shoes because they are ideal for foot movement during rowing due to their slightly curved shape.

 
Make sure that you do not over-tighten the shoes before training as this can restrict circulation during exercise and cause numbness in the feet.

Adjusting the Foot Straps

Step 1: Undo the Velcro fastenings on the straps.

Step 2: Place your feet on the pedals and fix them by tightening the straps. Make sure that they hold your feet firmly but do not pull them too tight. Close the Velcro fasteners.

Fastening the feet firmly is very important for the correct execution of the rowing movement. In order to move your body forwards you need a firm hold on your feet.

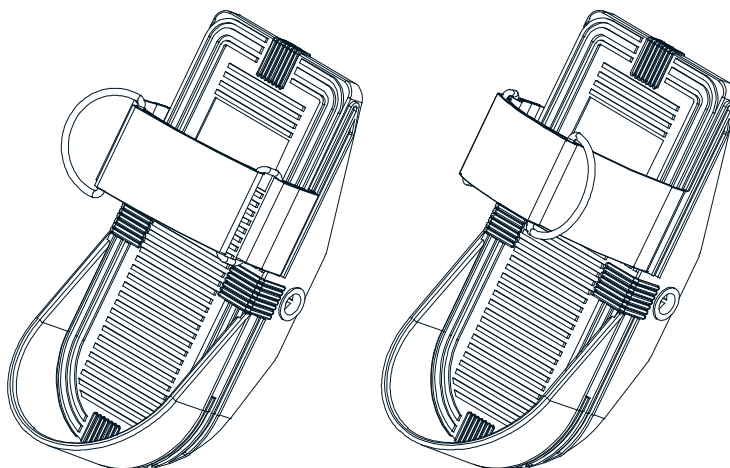

Cleaning

Please use only a slightly damp cloth for cleaning. Attention! Never use gasoline, thinner or other aggressive cleaning products to clean the surface, as this may cause damage. The device is only suitable for private home and for indoor use. Keep the device clean and moisture away from the device. Damage caused by body sweat or other liquids is not covered by the warranty under any circumstances.

Maintenance

We recommend checking the screws and moving parts at regular intervals. The device may only be used for training if it is working properly. For possible repairs or needed spare parts, please contact our customer service. **WARNING:** The device may only be used after it has been successfully repaired.

Disposal

In the interest of the environment, do not dispose of the packaging materials, empty batteries and parts of the device with the household waste, but throw them into the designated collection containers or hand them in at suitable collection points. Observe the currently valid regulations.

**European Disposal Directive**

Never dispose of your training equipment in the normal household waste. All consumers are legally obliged to dispose of old appliances separately from household waste.

Dispose of the device only with a municipal or an authorised disposal company. Here the disposal of this device is free of charge. This is the only way to ensure that your old device is professionally disposed of and that negative effects on the environment will be avoided. Please observe the regulations which currently apply. If in doubt, please ask your local or municipal authorities for detailed information on how to dispose of your training device properly and in an environmentally sound manner.

**Batteries / Re-chargeable Batteries**

Batteries and re-chargeable batteries may not be disposed of in your normal household rubbish.

Please be aware that batteries and re-chargeable batteries may contain toxins. This means that all consumers are legally obliged to hand over used batteries and re-chargeable batteries to their local authority, at a municipal collection point or to return them to the retailer. If in doubt, please enquire at your municipal or local government authority on how to dispose of your batteries and rechargeable batteries properly and in an environmentally sound manner. Only return or dispose of batteries and rechargeable batteries if they are fully discharged.

The cockpit is powered by two batteries type AA. If the display on the cockpit should become weak or go out completely, replace these batteries with new ones. Please observe the disposal instructions included in this manual when you dispose of the old batteries.

The battery compartment is on the back of the cockpit. Make sure that you put the batteries the right way around in the battery compartment.

The warranty is 24 months, applies to new goods at first purchase and begins with the invoice or delivery date. During the warranty period, any defects will be repaired free of charge. If you find a defect, you are obliged to report it immediately to the seller. It is at the discretion of the seller to fulfill the warranty by sending spare parts or replacement. In case of shipment of spare parts, the seller has the right to replace without loss of warranty. Repair at the place of installation is excluded. Devices for home use are not suitable for commercial or industrial use. Violation in the use will result in warranty reduction or loss. Warranty coverage applies only to defects in materials or workmanship. Wear parts or damage caused by misuse or improper handling, use of force and interventions made without prior consultation with our service department will void the warranty. If possible, please keep the original packaging for the duration of the warranty period in order to adequately protect the goods in the event of a return and do not send any goods carriage forward to our address. A claim under warranty does not result in an extension of the warranty period. Claims for compensation for damage that may occur outside the device (unless liability is mandatory regulated by law) are excluded.

Manufacturer:

**Gorilla Sports GmbH
Nordring 80
64521 Groß-Gerau**

Here you can find an overview of our international partners:
www.gorillasports.eu

In the following you will find instructions and tips to help you to do the rowing movements correctly.

Rowing Movement – complete body

Step 1: Preparation

Make sure that your feet are in positioned correctly on the pedals and that they are adjusted correctly to fit your shoe size with the straps firmly around your feet. Grasp the rowing handle from above with both hands. Your hands should be approximately 20 cm apart.

Step 2: Starting Position

Lean forward with your upper body as far as possible with your knees bent.

Step 3:

Now use your feet to push yourself backwards.

Step 4: End Position

Push yourself far enough back with your feet so your knees are only slightly bent. **CAUTION:** Never completely straighten your knees! At the same time pull your arms towards you until your hands lightly touch your body just below your ribcage in the region of your solar plexus. Straighten your body far enough for your back to be pulled straight and pull your shoulders slightly back. **CAUTION:** Never bend your back too far backwards!

Step 5: Return to the Starting Position

Pull yourself forwards again with your feet and lean forwards with your upper body with your arms stretched out in front of you.



Rowing Movement – Legs Only

Step 1: Preparation

Make sure that your feet are in positioned correctly on the pedals and that they are adjusted correctly to fit your shoe size with the straps firmly around your feet. Grasp the rowing handle from above with both hands. Your hands should be approximately 20 cm apart.

Step 2: Starting Position

Lean forward with your upper body as far as possible with your knees bent.

Step 3:

Now use your feet to push yourself backwards.

Step 4: End Position

Push yourself far enough back with your feet so your knees are only slightly bent.

CAUTION: Never completely straighten your knees!

Step 5: Return to the Starting Position

Pull yourself forwards again with your feet.



Rowing Movement – Arms Only

Step 1: Preparation

Make sure that your feet are in the optimum position, ie, that the shoe size is adjusted correctly and the foot straps are tightened properly. Hold the rowing grip with both hands gripping over the bar. Your hands should be approximately 20 cms apart.

Step 2: Starting Position

Push yourself backwards on the seat as far as possible but keeping your knees still slightly bent.

Step 3:

Hold the rowing grip with your arms stretched out forwards at the same level as your solar plexus.

Step 4: End Position

Pull the rowing grip far enough towards you to touch your stomach pulling back your shoulders at the same time.

CAUTION: Your legs should remain in the starting position and not move at all.

Step 5: Return to the Starting Position

Pull yourself forwards again with your feet and lean forwards with your upper body with your arms stretched out in front of you.



Training preparations

Before you start training, not only must the training equipment be in perfect condition, but you or your body should also be ready for training. Therefore, if you have not done any strength/endurance training for a long time, you should always consult your family doctor before starting your training and carry out a fitness check-up. Please also discuss your training goals with your doctor; he or she can certainly give you valuable tips and information. In particular, this applies to people over 35 years of age, people who are overweight and/or have problems with the cardiovascular system.

Workout planning

The be-all and end-all for effective, goal-oriented, but also motivating training is planning your workouts. Therefore, plan your fitness training into your normal daily routine as a fixed component. Unplanned training can quickly become a disruptive factor, or be postponed indefinitely for another task. Plan your workout for the long term, for months at a time, and not just from day to day or week to week. Training planning also includes providing sufficient motivation during the workout. Music is ideal for this. Also provide training rewards. Set realistic goals, such as losing 1 kg in four weeks, increasing your training weight by 10 kg in six weeks, or similar. When your goals are achieved, reward yourself!

Training frequency

Experts recommend doing endurance/strength training 3 to 4 days a week. Certainly, the more often you train, the faster you will reach your training goal. However, when planning your workout, make sure to take sufficient breaks from training to give your body enough time to recover and regenerate. You should take at least one day off after each training session.

Hydration

Sufficient fluid intake is essential before and during training. During a training session of 60 minutes, it is quite possible to lose up to 0.5 liters of fluid. To compensate for this fluid loss, apple spritzer in a mixing ratio of one-third apple juice and two-thirds mineral water is ideal, as it contains and replaces all the electrolytes and minerals that the body loses through sweat. 30 minutes before the start of your training session you should drink about 330 ml. Ensure a balanced fluid intake during your workout.

 
Warm-Up

Complete a warm-up before each training session. Warm up your body by 5 - 7 minutes before the actual training session at low load with skipping rope, cross trainer or similar. This is the best way to prepare yourself for the upcoming workout.

Cool-Down

Never stop training immediately after finishing your actual training program. Let your training, similar to the warm-up phase still 5 - 7 minutes at low load on an exercise bike, cross trainer, etc. loosely run out. Afterwards, you should always stretch your muscles well.

Thighs

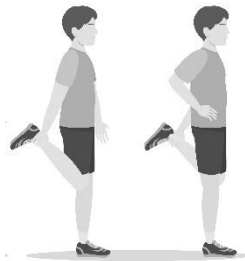

Support yourself with your right hand against a wall or your exercise equipment. Lift the left foot backward and hold it with the left hand. The knee points straight down. Now pull your thigh back until you feel a slight stretch in the muscle. Hold this position for 15 - 20 seconds. Slowly release your foot and slowly put the leg down again. Now repeat this exercise with the right leg.

Legs and lower back

 


Sit on the floor with your legs stretched out.

Try to grasp the tops of your feet with both hands, stretching your arms and bending your upper body slightly forward.

Hold this position for 15 to 20 seconds. Release the tops of your feet and slowly and steadily straighten your upper body.

Triceps and shoulder

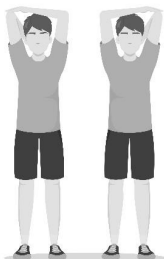


Reach behind your head to your right shoulder with your left hand and pull on your left elbow with your right hand until you feel a slight tug.

Hold this position for 15-20 seconds.

Now repeat this exercise with the right hand.

 Upper body

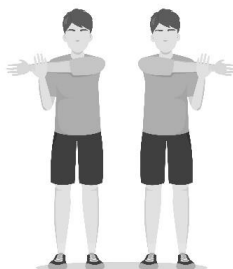

Bring your extended left arm past your right arm at shoulder level and pull on your left upper arm with your right hand until you feel a slight tug.

Hold this position for 15-20 seconds.

Now repeat this exercise with your right hand.



NORDRING 80, 64521 GROß-GERAU
WWW.GORILLASPORTS.EU