


SAVE THESE INSTRUCTIONS

MAXXUS[®]

MX 30.0
OPERATION INSTRUCTIONS

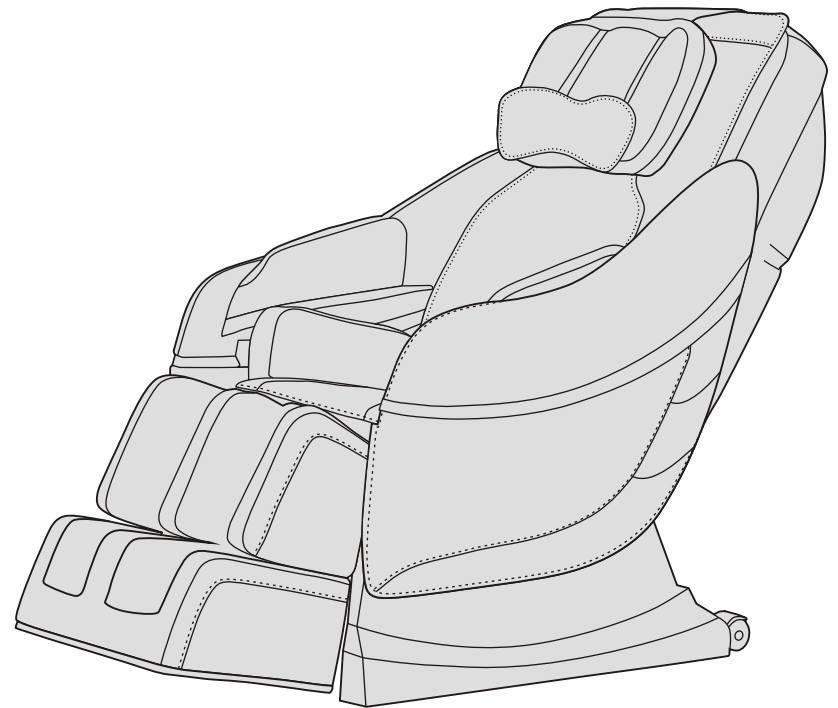

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use. Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function & Efficacy	05
Method of usage	16
Product specification	17

1. IMPORTANT SAFETY WARNING.

- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or Damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. persons insensitive to Heat must be careful when using the appliance.

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.



5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

Name and function of components

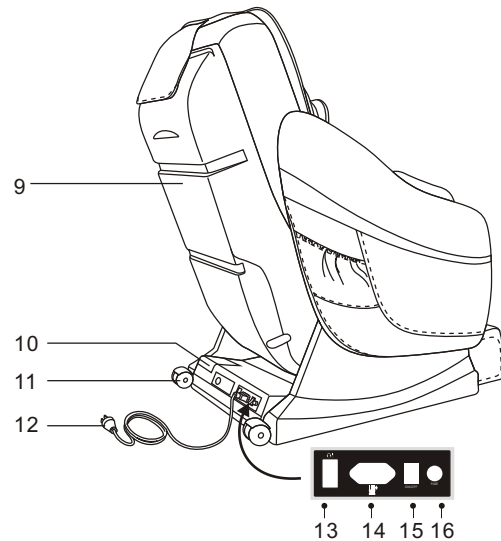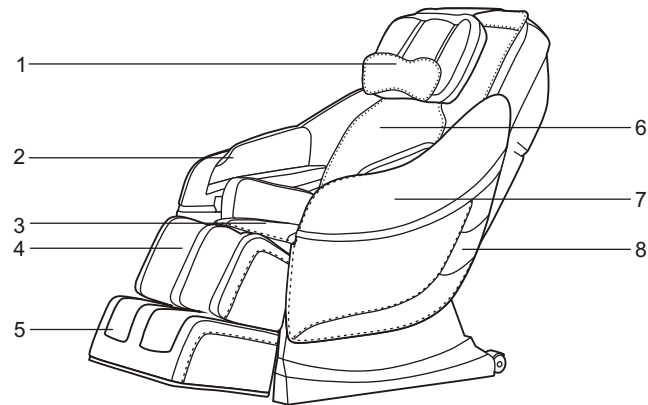

1. Pillow pad
2. Arm air bag components
3. Seat cushion
4. Leg rest frame
5. Foot rest frame
6. backrest pad
7. Armrest
8. remote controller pocket
9. backrest cover
10. MP3 Player Box
11. Moving wheels
12. Power cord and plug
13. Earphone socket
14. power plug socket
15. Power switch
16. Fuse box

Function & Efficacy


Function

1. This product is designed with a set of smart 3D mechanical hands, which can move up and down, stretching back and forth, four-wheel driven with muted design.
2. The shoulder part is designed with automatic detection and micro adjustment function; body curve and massage points automatic detection, it can automatically adjust the distance of massage hands' moving back and forth according to the detected body curve and massage points, to make the massage more humanistic and scientific.
3. Designed with automatic massage programs
4. Air pressure, waist twist, swing hip, waist stretch and other specific massage functions.
5. Manually select the upper body massage; three massage position options of overall, partial and fixed position; six massage methods of shoulder grasping, kneading, tapping, shiatsu, kneading&flapping and 3D; five massage speed levels available; under tapping and shiatsu massage status, the width of the massage hand can be adjusted in five levels.
6. Arm air massage function (built-in 20 airbags), leg air massage function (built-in 32 airbags), with 3 intensity adjustments
7. Upper-body air massage: neck and shoulder air massage function (built-in 6 airbags), back air massage function (built-in 4 airbags) seat air massage function (built-in 16 airbags)
8. MP3 music displayer. pause, previous, next, volume up, volume down.
9. Back heating function. Use carbon fiber as infrared heating source
10. The footrest can be extended to suit various heights .
11. Footrest lifting and backrest lift adjustment
12. Auto-sitting function, massage Massage hands can automatically return to Original position after turning off.
13. VFD display
14. MP3 player, earphones, U disc

Effectiveness

- Release fatigue
- Accelerate blood circulation
- Release muscle fatigue
- Release muscle tension
- Release nerve pain

Method of usage

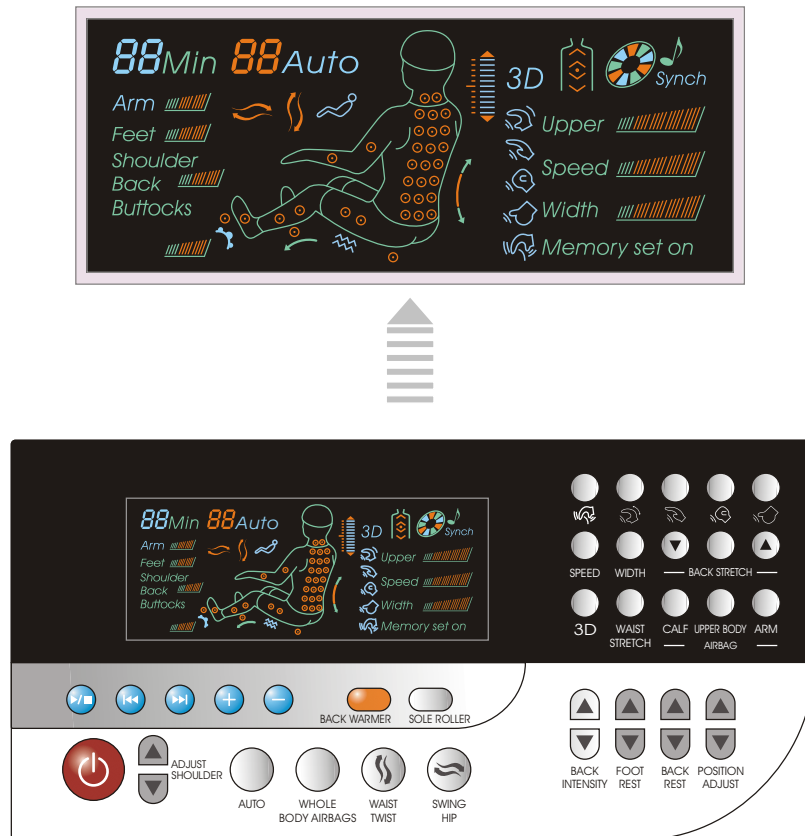

Method of usage

1. Switch power supply on







2. Adjust angle of backrest and footrest


Footrest up button: press this button and the footrest will recline slowly, release the button it will stop.	
Footrest down button: press this button and the footrest will decline slowly, release the button it will stop.	
Backrest up button: press this button the backrest will recline slowly. release the button it will stop.	
Backrest down button: press this button the backrest will decline slowly. release the button it will stop.	
Position adjust up button: press this button the backrest will recline and the footrest will decline slowly. release the button it will stop.	
Position adjust down button: press this button the backrest will decline and the footrest will recline. release the button it will stop.	

Method of usage

3. Start massage



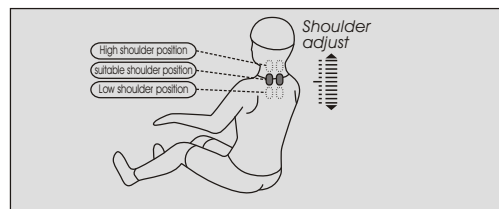

- 1). Press the red power button to start massage, the massage chair will recline automatically.
- 2). Automatically detecting shoulder position and massage points, please wait till dection finished.
- 3). It sounds [di di di...] after detection finished. Now, please adjust the shoulder position by pressing up or down button. It will run automatic massage if there is no adjustment on shoulder position within 10 seconds.

Move the massage balls upward to a suitable position.	 ADJUST SHOULDER	
Move the massage balls downward to a suitable position.	 ADJUST SHOULDER	



4) . Choose massage methods





• Automatic massage

Relax: relax muscles and bones	 AUTO	Auto F1
Ease: accelerate blood circulation	 AUTO	Auto F2
Ache Release: make deep massage to relax the ache position	 AUTO	Auto F3
Fatigue recover: release the fatigue and activate body	 AUTO	Auto F4











Note: Press the buttons repeatedly and choose different automatic massage methods, the four automatic massage methods can run circularly.

Method of usage









• Specific massage

Whole-body air massage: air massage on neck&shoulder, waist, buttock, arms and thigh positions will work at the same time.	 UPPER BODY	Auto F5
Waist twist: focus on waist massage, the waist airbags make waist twist leftside and rightside, meantime the seat airbags make hip-swing massage	 WAIST TWIST	Auto F6
Swing Hip: focus on hip massage, swing hip mechanism and seat cushion pressure operating makes hip swing left and right	 SWING HIP	Auto F7
Waist stretch: When the calf airbags work and squeeze calf part, the backrest lays down and calfrest pulls down to stretch the waist part, then return to original position and repeat above actions. Meantime the seat airbags and massage mechanism works.	 WAIST STRETCH	Auto F8







• Upper-body manual massage

Shoulder grasp: 1 method available with speed and strength adjustment		(H1)
Shiatsu: 2 methods available with speed, width and strength adjustment.		(H1-H2)
Kneading: 2 methods available with speed strength adjustment.		(H1-H2)
Flapping: 2 methods available with speed, width and strength adjustment.		(H1-H2)
Kneading&Flapping: 2 methods available with speed strength adjustment.		(H1-H2)
3D: 4 methods available with speed and strength adjustment.	 3D	3D (H1-H4)
Speed: 5 leves available	 SPEED	Speed 
Width: 5 levels available (only under flapping and shiatsu status).	 WIDTH	Width 

Method of usage





Backrest stretch (can be operated under all manual modes except shoulder grasp status).			
Fixed massage		 BACK STRETCH	
Partial massage		 BACK STRETCH	
Overall massage		 BACK STRETCH	
Position adjustment (under fixed and partial status, the position can be adjusted).	Massage mechanism up		
	Massage mechanism down		

• Lower-body manual air massage







Foot: foot air massage with 3 strength available When foot air massage is working, the footrest stretch function will run automatically	 CALF	
Upper-body: neck&shoulder, waist and seat air massage	 UPPER BODY	
Arm: arm air massage with 3 strength available	 ARM	

Note: Under automatic massage status, it can adjust the relative air massage strength by pressing any button of Arm, Upper-body and Foot











• Other manual functions:

Foot roller: with 3 speed levels available	 SOLE ROLLER	
Backrest heating: backrest infrared heating massage, can be felt after 3 minutes	 BACK WARMER	

Method of usage

Upper-body strength adjustment with 5 levels available:		
Stronger: press this button to increase the strength of backrest massage	 	Upper 
Weaker: press this button to decrease the strength of backrest massage.	 	Upper 

• Music

Music	Music on and off		
	Previous		
	Next		
	Volume up		
	Volume down		

4. Shut off power and finish massage

Press red power button during massage to stop all massage functions immediately, the backrest and footrest will return to original position automatically.

After rated working time, all massage functions will be finished but backrest and footrest won't return to original position.

Switch power off

Figure (switch power off)




Method of usage

5.How to download mp3 music :

- 1.Turn off the power of massage chair .
- 2.Pull out the u-disk from theMP3 player .
- 3.Insert the u-disk into USB port of PC (Windows Xp、 Windows 2000、 WindowsNT.)
- 4.Download your favorite MP3 format music into U-disk .if fails , please firstly format the disk.
- 5.Delete the USB Mass Storage Device on the PC after complete download .
- 6.Pull out the U-disk from PC
- 7.Insert U-disk to the USB port of MP3 player
- 8.Now MP3 music was renewed . you may turn on the power of massage chair .

Note :

- 1.If fails to play MP3 music ,please firstly format the U-disk on PC before Download.Then follow the instruction to insert the U-disk into USB port of Mp3 player.
- 2.Except the U-disk , do not remove or loose the MP3 player .

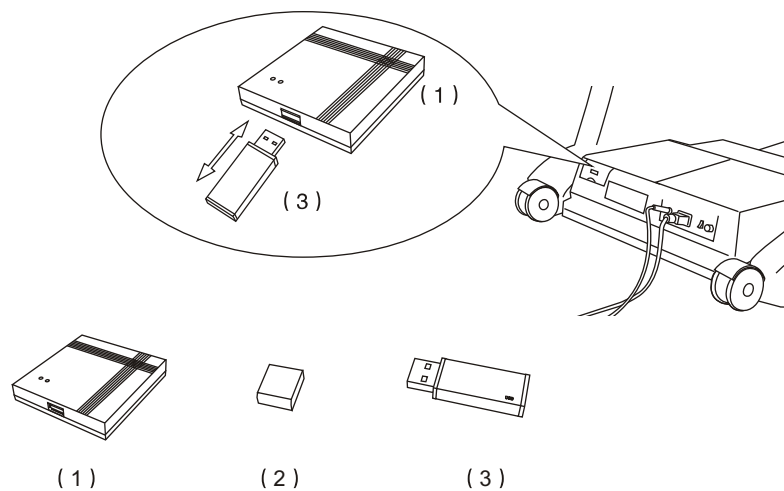

(1) MP3 player (2) U-disk front cover (3) U-disk

Method of usage

6. Amrest installation and notice.

- 1).Check if the inner supporting gear are well fixed onto related seat frame position.(figure 1)
- 2).Pull the zip on the lower edge of the armrest.
- 3).Open the big and small cover outside the armrest(shown as figure 2)
- 4).Lift the amrest and ready to install on the chair, pull air-pipe and valve from the seat frame and cross them through relative hole on the armrest side.(figure 3)
- 5).Push the sliding sets in the front part of armrest into the inner supporting Gear.(figure 4)
- 6).Push the end of the armrest into the revolving shaft.(figure 5)

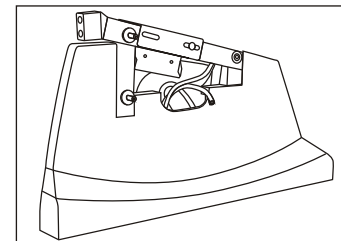


Figure1

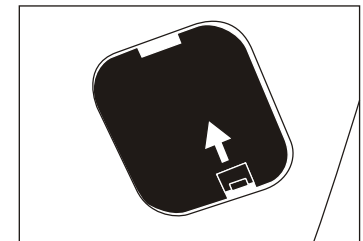


Figure2

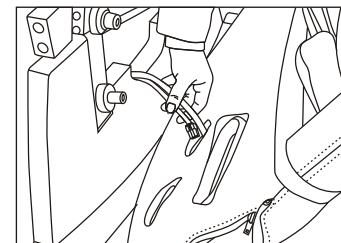


Figure3

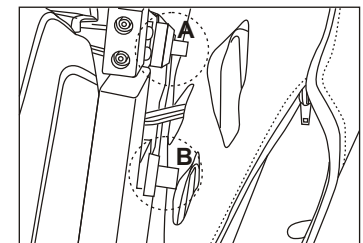


Figure4


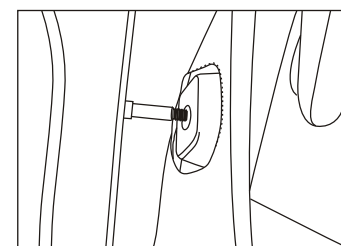


Figure5

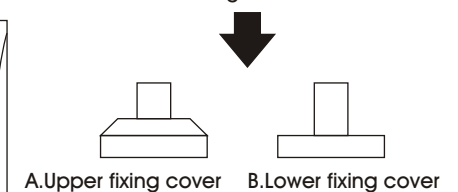

A.Upper fixing cover B.Lower fixing cover

Method of usage

- 7). Gently hold the armrest side. When revolve the shaft, firstly put into cage ring, then put into big washer and wrest the locknut by specialized tools. (Figure 6).
- 8). Thread the socket head cap screws into upper tightening cap (Figure 7), then use the provided wrench to screw in upper supporting gear and wrest screw tight.
- 9). Thread the socket head cap screws into lower tightening cap (Figure 7), then use the provided wrench to screw in lower supporting gear and wrest screw tight.

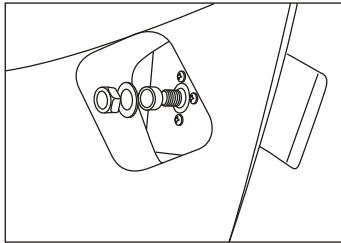


Figure6

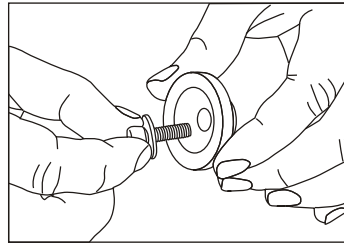


Figure7

- 10). Respectively connect air pipe and valve connector with relevant connectors on the iron plate of armrest (Figure 8).
- 11). Check if the armrest is well fixed. If there isn't much swing, close the big and small cover outside the armrest. (Figure 9).
- 12). Close the zipper of lower armrest and finish installation.


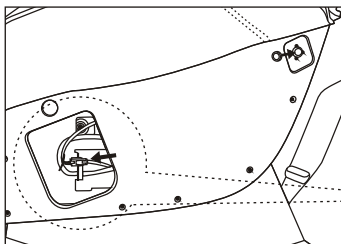


Figure8

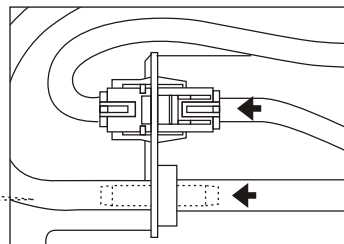

Enlarge sketch map

Method of usage

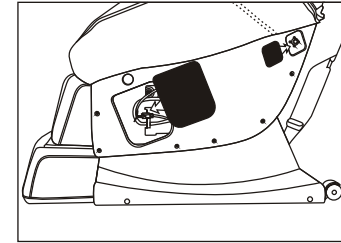


Figure9

Be careful don't put stress on the two sides of armrest in order to support the body (Figure 10)

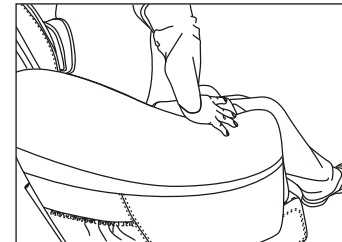


Figure10

Thread head pad air pipe and detection lines into pocket (Figure 11)

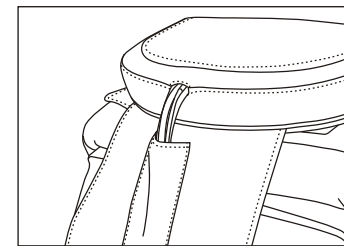


Figure11

Respectively connect the backrest trachea according to the number (Figure 12)

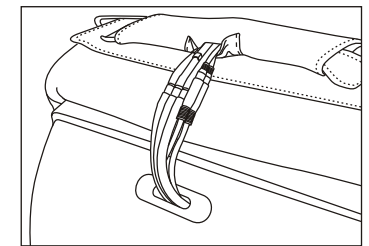



Figure12

Method of usage

7. FLOOR PROTECTION


Put the heavy massage chairs on the wood floor for a long time may damage the floor, so please place a carpet or other object to avoid this damage.

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair.

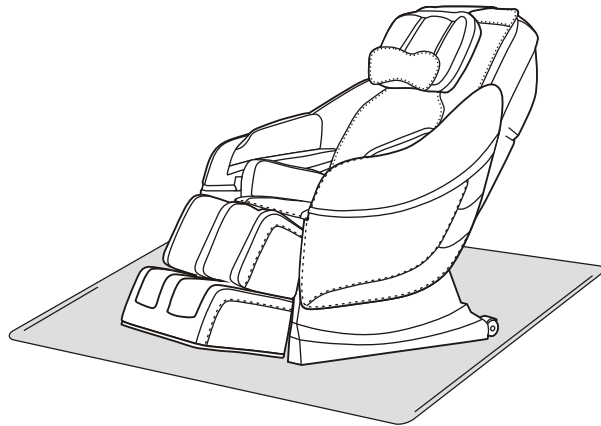

8. METHOD OF MOVEMENT

Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

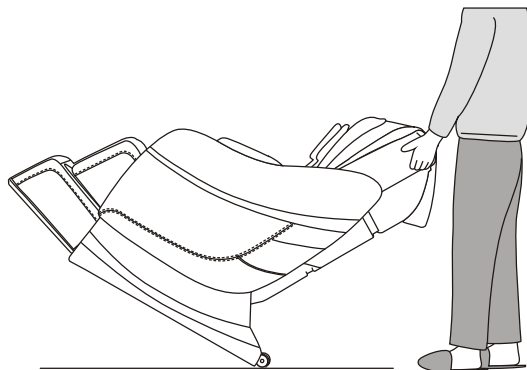

Product specification

Model: MAXXUS MX 30.0

Description: Full Body Air-massage Chair

Configure: 01

Rated Voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz / 60Hz ☐

Rated Power Input: 280W

Rated Working Time: 15 Minutes

Safety Design: Class I

Distributor
MAXXUS Group GmbH & Co. KG
Nordring 80, D-64521 Gross-Gerau
Germany
E-Mail: info@maxxus.de
www.maxxus.com