

MAXXUS 90R PRO

Bike



ENG

MAXXUS

Index

Index	2
Safety Instructions	3
Overall View of the Device	4
Fixing Materials	5
Tools Included in Delivery	5
Assembly	6 – 11
Self Generator	11
Seat Adjustment	12
Levelling	12
Transport, Location & Storage	13
Care, Cleaning & Maintenance	13
Cockpit	14 - 20
Pulse & Heart Rate	21 - 22
Training Recommendations	23 - 24
Technical Details	25
Disposal	25
FAQ	26
Recommended Accessories	26
Exploded Drawing	27
Spare Parts List	28 - 29
Warranty	30
Service Contract	31

Before you start exercising, be sure to read the entire operating manual, especially the Safety Information, the Maintenance and Cleaning Information and the Training Information. Also make sure that anyone else who uses this training device is familiar with this information and observes it.

Always follow the maintenance and safety instructions in this manual very carefully.

This training device may only be used for its specific intended use. Any misuse can cause risk of possible accident, damage to health or damage to the device for which the Distributor will not assume any liability.

Electrical Connection (only applies to devices with an external electrical connection)

- A mains voltage of 220-230V is required to operate this training device.
- The training device is only to be connected to the mains with the mains cable supplied using a 16A individually fused and earthed socket installed by a qualified electrician.
- Always remove the electric plug from the socket before moving the training device.
- Remove the electric plug from the socket before commencing any cleaning, maintenance or other works.
- Do not connect the mains plug to a socket on a socket strip or on a cable drum.
- If using a cable extension please ensure that this complies with DIN standards, VDE regulations and guidelines, technical rules issued by other European Union states.
- Always place the mains cable so it cannot be damaged or cause a tripping hazard.
- In operating or standby mode, electrical devices such as mobile phones, PCs, Televisions (LCD, plasma, tube, etc.), game consoles etc. will emit electro-magnetic radiation. For this reason, all these types of devices should be kept away from your training device as they could lead to malfunction, disturbances or false outputs being shown in heart rate measurements.
- For safety reasons, always remove the electrical plug from the socket when the device is not in use.


Training Environment


- Select a suitable space for your training device to provide an optimum amount of free space and highest level of safety. You should leave a safety distance of at least 100 cm behind the training device and at least 100cm to each side and in front of the device.
- Make sure that the area is well ventilated and that an optimum amount of oxygen is available during training. Avoid draughts.
- Your training device is not suitable for outside use and so storage and training can only take place in a temperate, clean dry room.
- The temperature range to operate or store this device is between a minimum of 10° and maximum of 30°
- Do not operate or store your training device in wet areas such as in swimming pools, saunas etc.
- Make sure that your training device is kept on flat, hard, clean ground both in operation and at rest. Any uneven surfaces must be removed or made good.
- It is recommended permanently to place a MAXXUS® Floor Protection Mat under the device to protect damageable floors such as wood, laminates, floor tiles etc. Please ensure that the mat cannot slip or slide.
- Do not put this training device on pale or white coloured carpets or rugs as the feet of the device may leave marks.
- Make sure that your training device and mains cable are kept out of contact with hot surfaces and are kept at a safe distance from any sources of heat e.g. central heating, hot stoves, furnaces, ovens or open fires.

Personal Safety Instructions for Training

- Remove the mains cable from the training device when not in use to avoid inappropriate or uncontrolled use by any other third party, e.g. children.
- You should have a health check carried out by your doctor before you start any training
- Stop training immediately if you feel physically unwell or are experiencing any breathing difficulties.
- Always start your training session at a low workload increasing it slowly but steadily throughout. Reduce the workload again towards the end of your training session.
- Suitable sports shoes and clothes should always be worn during training sessions. Make sure that loose clothes do not get caught up in the treadmill belt or rollers.
- Your training device is only to be used by one person at a time.
- Check each time before a training session to see if your device is in perfect condition. Never use your training device if it is faulty or defective.
- You are only permitted to carry out repairs to the device yourself after having contacted our Service Department and on receipt of explicit permission to do so. Only original spare parts may be used at any time.
- Your training device must be cleaned after each use. Remove all dirt including body sweat or any other liquids.
- Always make sure that liquids (drinks, body sweat, etc.) do not get onto the vibrating plate or into the cockpit as this can cause damage to the mechanical and electronic components.
- Your training device is not suitable for use by children.
- Third parties, especially children and animals, must be kept at an appropriate safety distance during training.
- Check if there are any items underneath the training device before each training session and remove them without fail. Never use the training device when items are underneath it.
- Do not allow children to use your training device as a toy or climbing frame at any time.
- Ensure that no body parts of your own or of third parties ever come in contact with any of the moving mechanisms.

The construction of this training device is based on state-of-the-art technology and highest modern technical safety standards. This training device is to be used by adults only! Extreme misuse and/or unplanned training can cause damage to your health! This training device is suitable for non-therapeutic purposes.

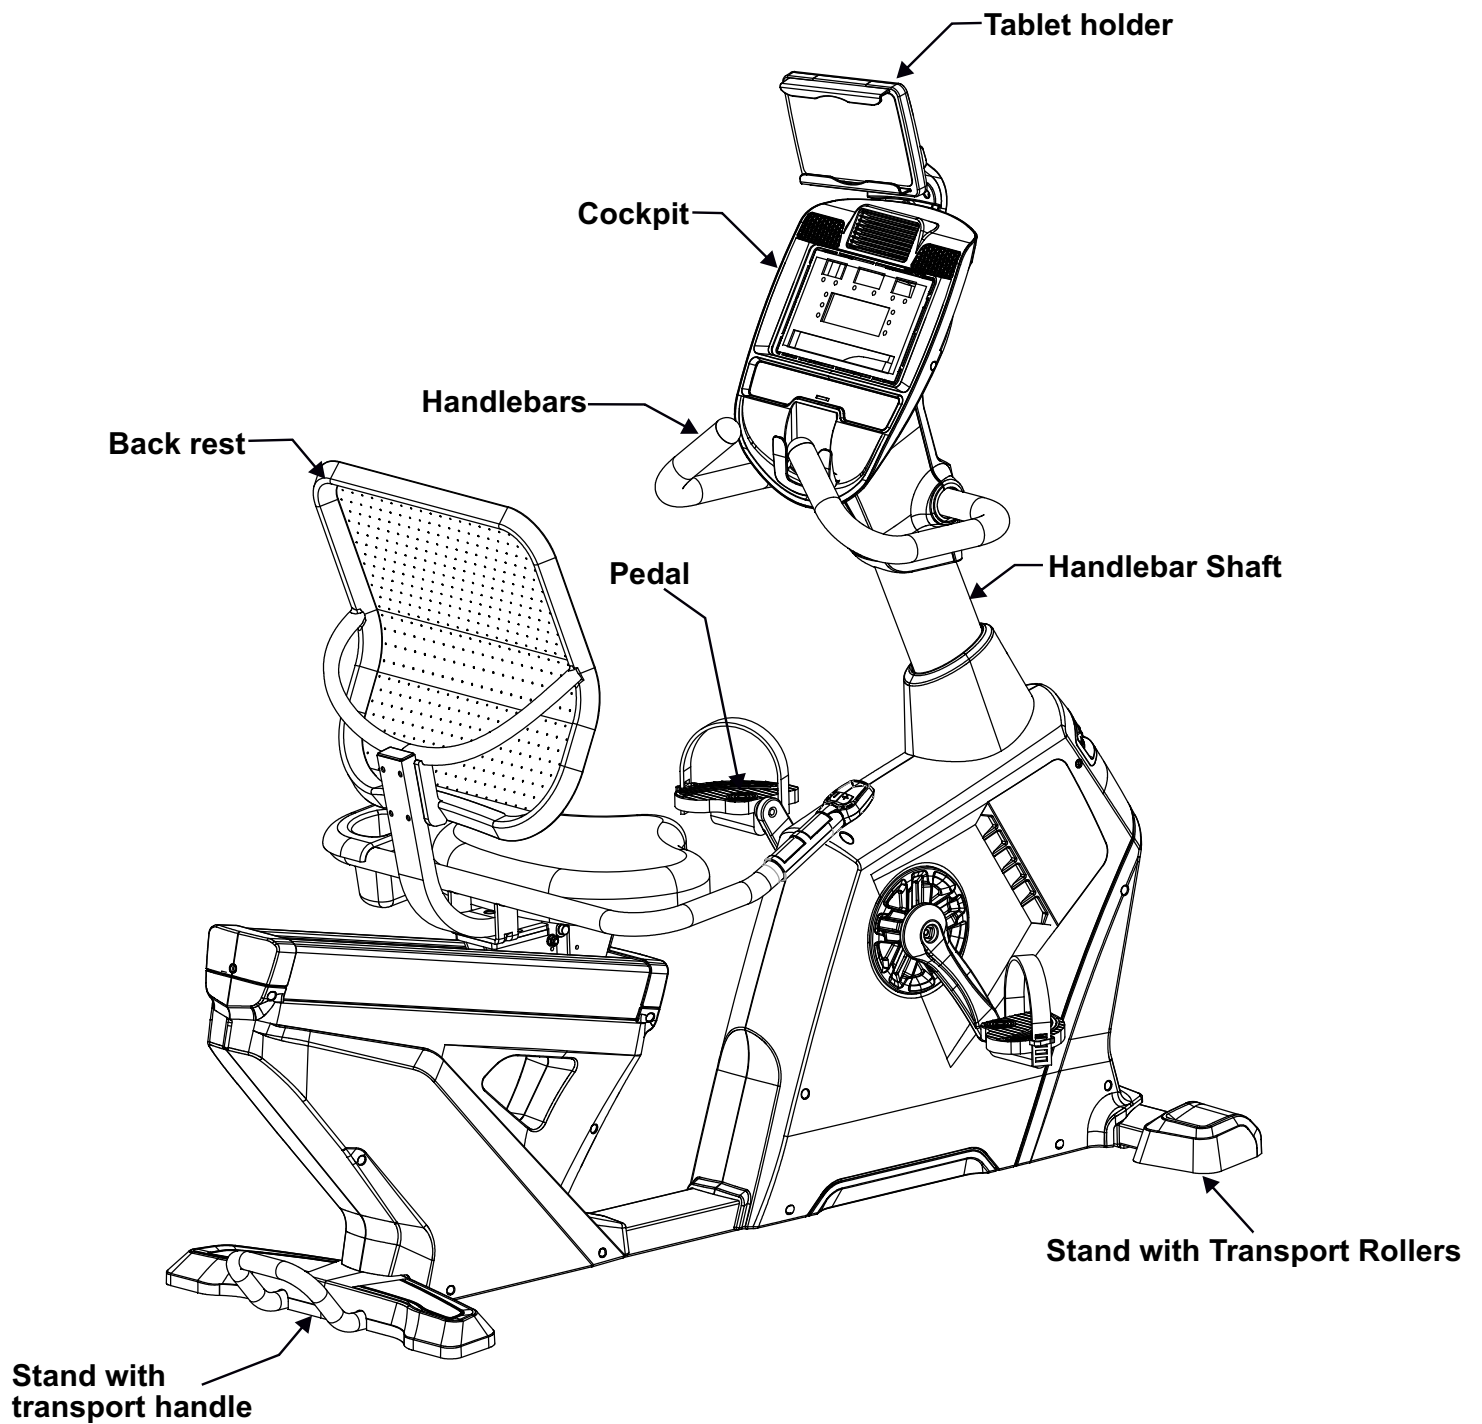


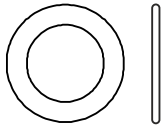


Teil 43
Unterlegscheibe Ø8
3 Stück




Teil 41
Federscheibe Ø8
3 Stück

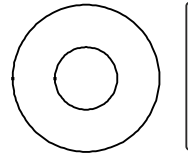


Teil 44
Unterlegscheibe Ø10
6 Stück

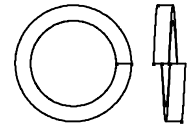


Teil 42
Federscheibe Ø10
6 Stück

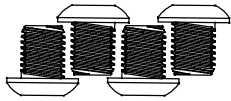

Teil 19
Innensechskantschraube
M10x20
4 Stück

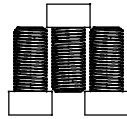


Teil 20
Innensechskantschraube
M8x20
3 Stück

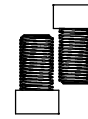


Teil 24
Innensechskantschraube
M8x15
2 Stück




Teil 25
Innensechskantschraube
M6x15
4 Stück

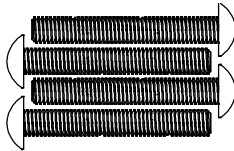

Teil 28
Innensechskantschraube
M6x40
4 Stück

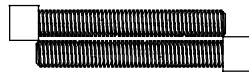


Teil 27
Innensechskantschraube
M8x35
2 Stück

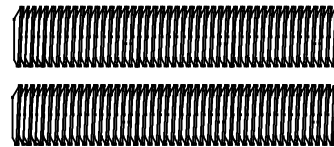


Teil 22
Gewindestift M12x70
2 Stück




Teil 31
Innensechskantschraube
M6x10
2 Stück

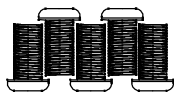

Teil 36
Linsenkopfschraube M5x15
5 Stück

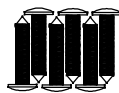


Teil 38
Blechschrabe 4x16
6 Stück

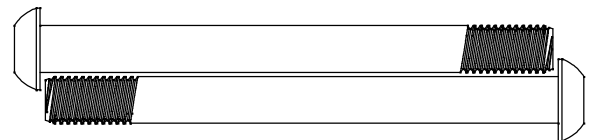

Teil 23
Innensechskantschraube M10x110
2 Stück

Im Lieferumfang enthaltenes Werkzeug

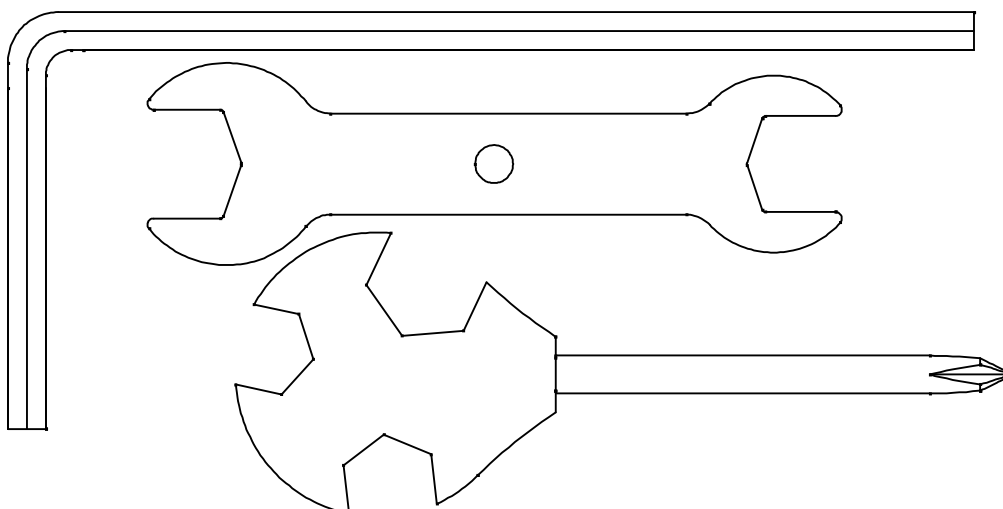

Assembly


Carefully unpack all parts of the delivery. Two people are required because some parts of your training device are bulky and heavy. Before starting the assembly, check the completeness of the fixing materials (screws, nuts, etc.) and the components against the parts and fixing material lists on the previous pages of this manual.

Carefully carry out the installation, as damage or defects that have arisen due to assembly errors are not covered by the warranty under any circumstances. Read the instructions carefully before starting, follow the sequence of the installation steps exactly and follow the instructions for the individual assembly steps. The installation of the training device must be carried out by responsible adults.

Carry out the installation of your training device with two adults in a location that is level, clean and free of obstruction during assembly. Only after assembly of the training device has been completed can training be started.


Step 1: Mounting the front stand

Attach the front stand with transport wheels (3) to the front receptacle of the base frame (1) using two hexagon socket screws M10x110 (23), two spring washers Ø10 (42) and two washers Ø10 (44) each.

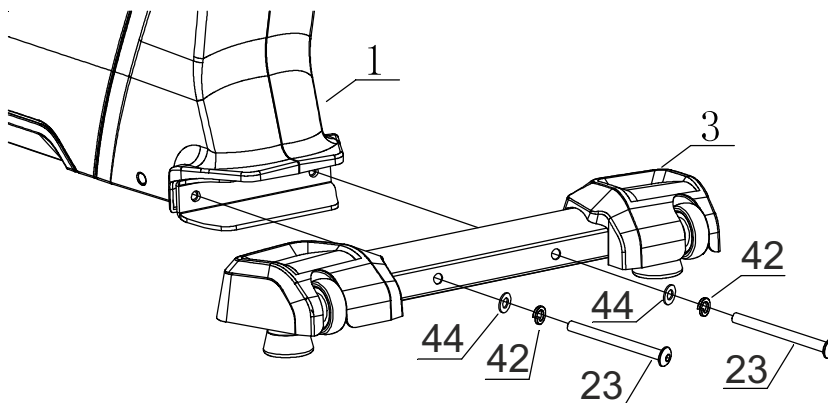

Step 2: Mounting the rear stand

Insert the rear stand with handle into the rear receptacle of the base frame (1) and fix it with four hexagon socket screws M10x20 (19), four spring washers Ø10 (32) and four washers Ø10 (44).

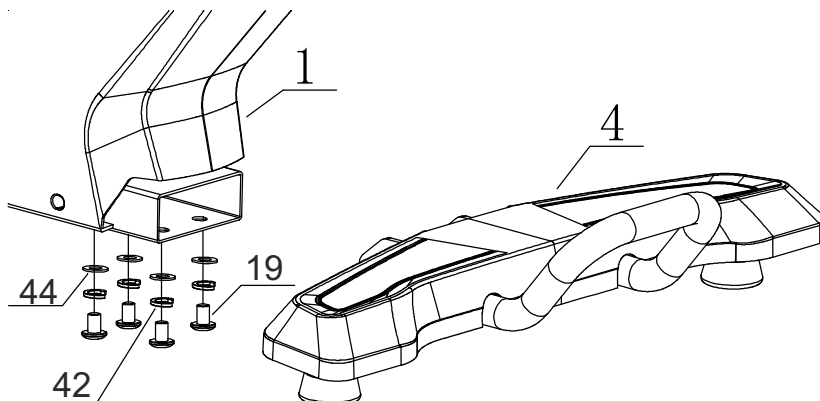

Step 3: Mounting the handlebar shaft

Slide the handlebar stem cover (71) onto the handlebar shaft (2) from below. Make sure that the covers are correctly aligned.


Insert the M12x70 set screws (22) into the seat of the base frame (1) for the handlebar shaft and tighten them slightly so that they grip.

Connect the cable (101 & 95) that protrudes from the bottom of the handlebar shaft (2) with the cable (102 & 96) that protrudes from the steering shaft receptacle of the base frame (1).

Now insert the handlebar shaft (2) into the receptacle of the base frame (1). Then tighten the set screws (22) already inserted.

⚠ Attention:

When inserting and fastening the handlebar stem (2), make absolutely sure that you do not crush or damage the cables.

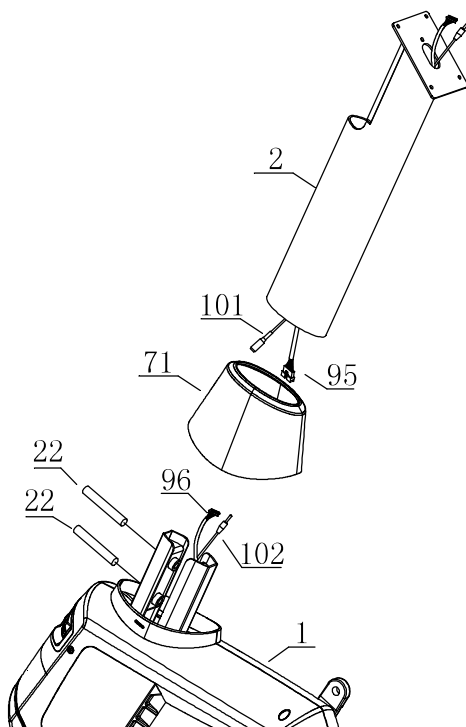


Step 4: Mounting the cockpit

Connect the cockpit cable (101 & 95) sticking out of the handlebar shaft (2) with the corresponding cable (104 & 105) sticking out of the cockpit (62).

Now fix the cockpit (62) to the handlebar shaft (2) with four pan-head screws M5x15 (36).


⚠ Attention:

When inserting and attaching the cockpit (45), make absolutely sure that you do not crush or damage the cables.

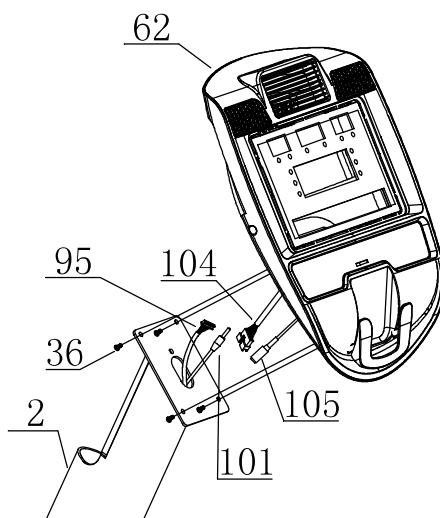


Step 5: Mounting the handlebar

Fasten the handlebar (9) to the handlebar shaft (2) with three hexagon socket screws M8x20 (20), three spring washers Ø8 (43) and three washers Ø8 (41).

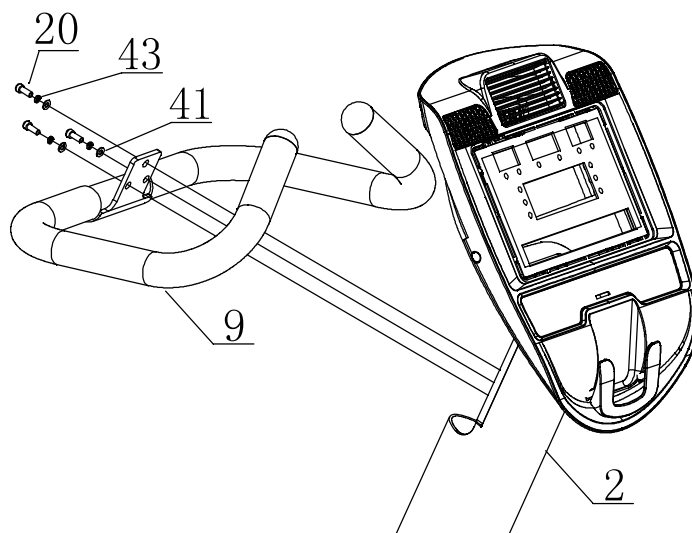


Step 6: Fitting the handlebar cover & water bottle holder

Insert the front and rear handlebar stem cover (76 - front/77-rear) on the handlebar stem (2) below the cockpit and fix it to the handlebar stem (2) with one pan-head screw M5x15 (36) and two self-tapping screws 4x16 (38).

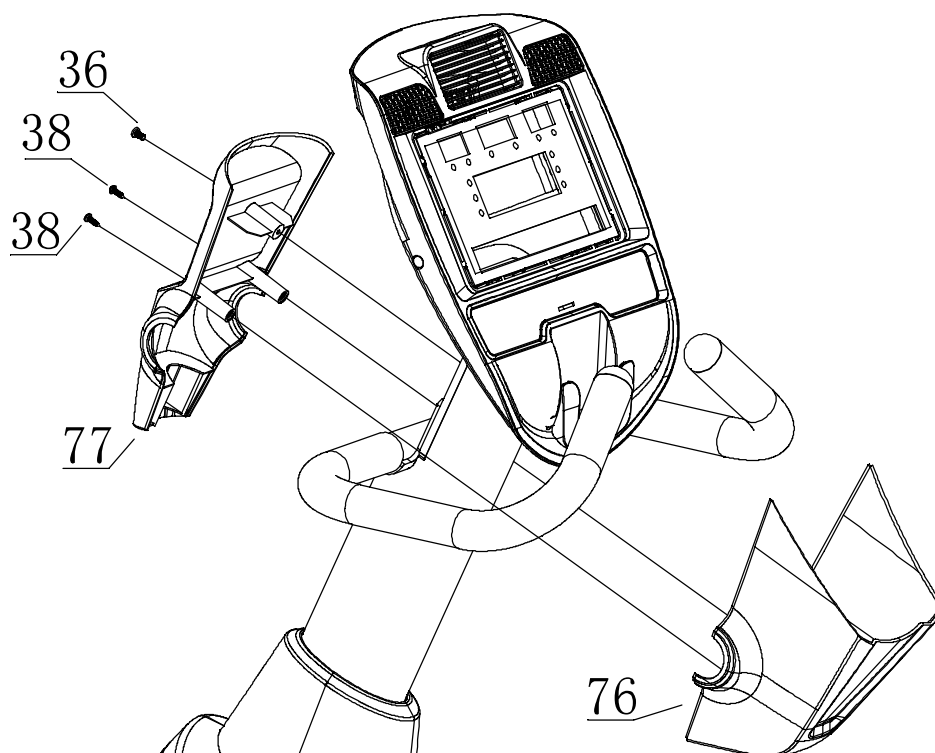

Step 7: Mounting the hand lever for seat adjustment

Place the hand lever (11) on the seat frame receptacle (5). Then fix it with two hexagon socket screws M6x10 (31).

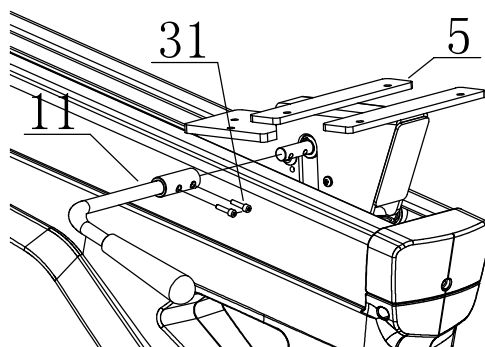

Step 8: Mounting the seat handle

Connect the cable (103) that protrudes from the handle (10) to the cable (102) that protrudes from the base frame. Place the handle (10) on the rear, upper receptacle of the seat frame (5).

Then fix it on the right and left (see arrows - figure 1) with one hexagon socket screw M8x15 (24) each.



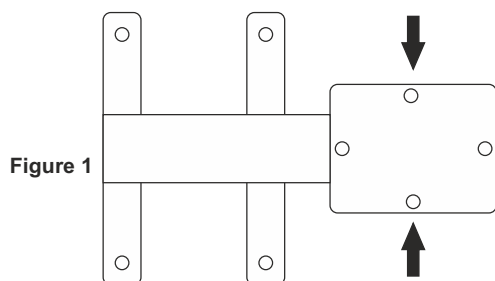


Figure 1

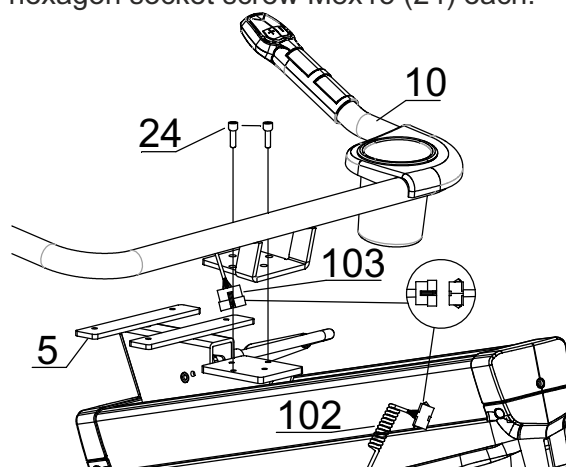


Step 9: Assembling the backrest frame

Insert the backrest frame (6) from behind below the handle (10). Then fix it with two hexagon socket screws M8x35 (27).

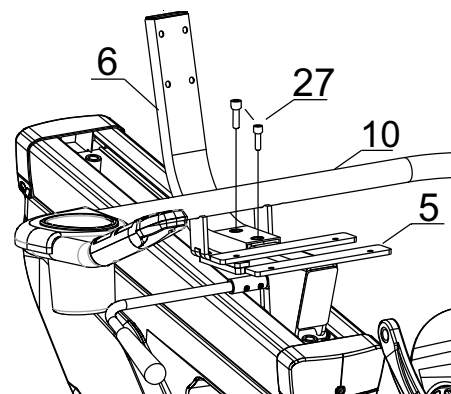


Step 10: Mounting the seat

Place the seat (84) on the seat frame (5) and fix it with four hexagon socket screws M6x15 (25).

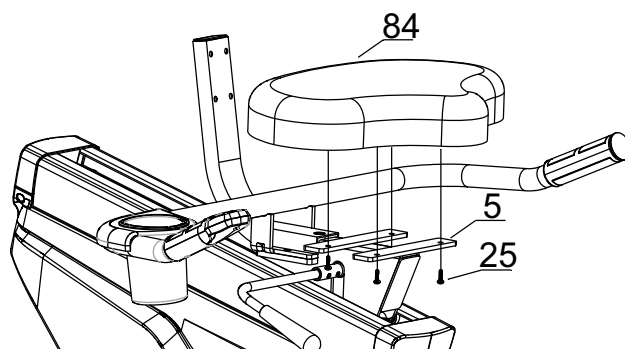

Step 11: Mounting the backrest

Attach the backrest (85) to the frame (6) with four hexagon socket screws M6x40 (28).

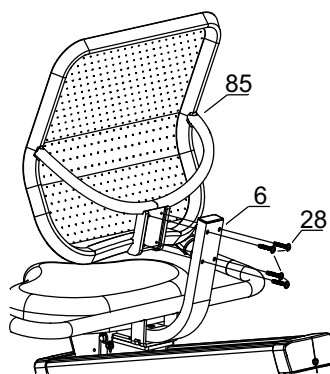


Step 12: Mounting the pedals

Insert the thread of the right pedal (83) into the receptacle of the right pedal arm and screw it clockwise.


Then insert the thread of the left pedal (82) into the receptacle of the left pedal arm and screw it tight in an anti-clockwise direction.

For better differentiation, the right pedal is marked with an "R" and the left pedal with an "L".

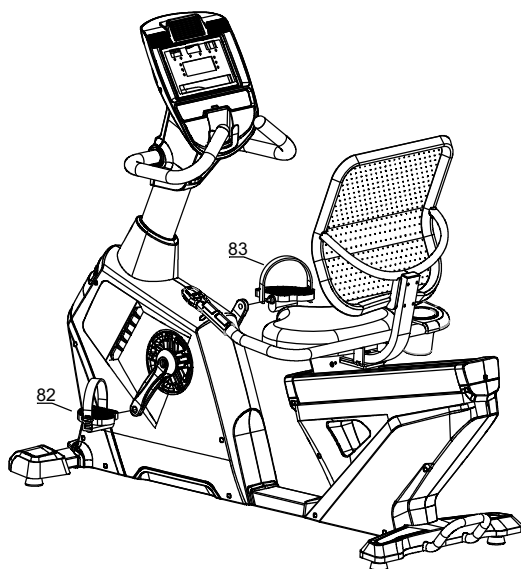


Step 13: Mounting the tablet holder

Attach the tablet holder (109) to the back of the cockpit with three self-tapping screws 4x16 (38).

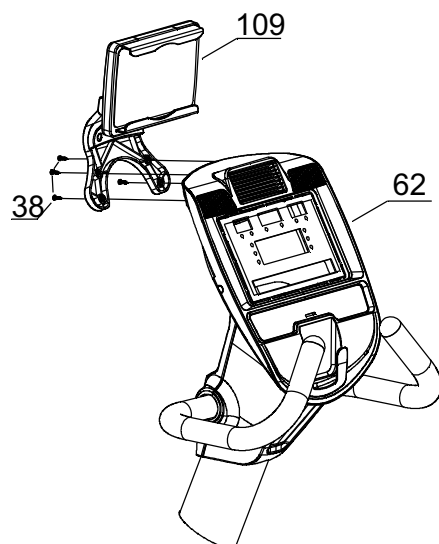

Step 14: Lubricating the seat rollers

Use the silicone oil included in the delivery to lubricate the rollers of the seat before using the unit for the first time. Repeat the lubrication every 6 months.

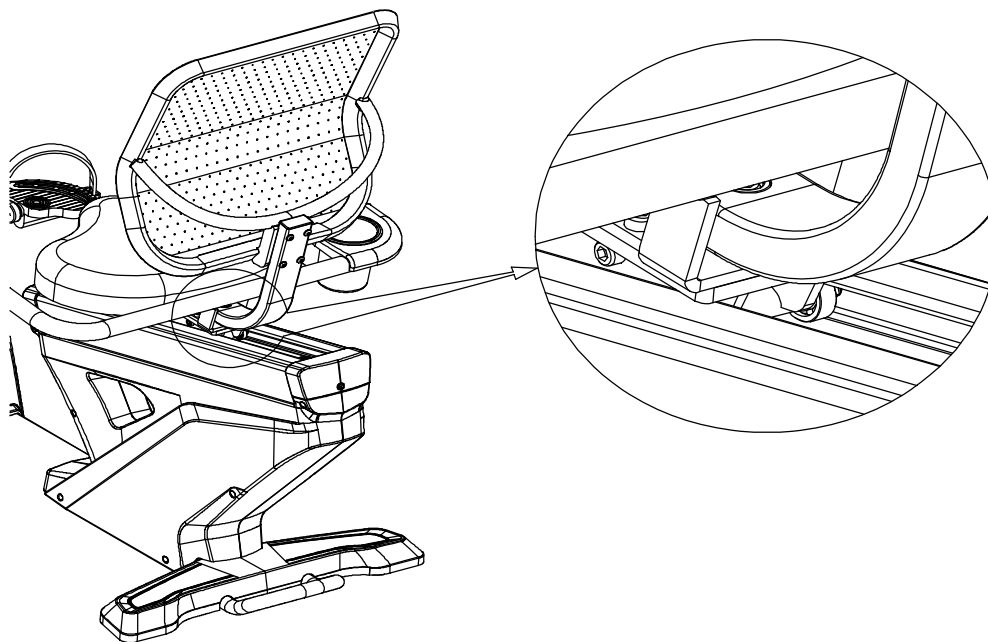

Self Generator operation

This training device is equipped with a generator system to produce electricity. Similar to a bicycle dynamo, the energy generated during training is converted into electricity and used to power the cockpit and the braking system.

Switching on the cockpit

As soon as you start pedalling, the cockpit switches on automatically.

Switching off the cockpit

The cockpit switches off completely shortly after the pedalling motion has ended.

Important note regarding the operation of the generator

During operation of the generator, a steady sound similar to that of a bicycle dynamo is heard.

This is a normal operating sound of the generator and at the same time indicates its correct operation.

Longitudinal direction of the seat

The longitudinal direction of the seat is adjusted using the hand lever located on the right underneath the seat.

To individually adjust the optimal seat position, sit on the seat, press down the hand lever and push yourself backwards with your feet against the pedals, or pull yourself forwards. When you have adjusted the optimum seat position, pull the hand lever up again to lock the seat.

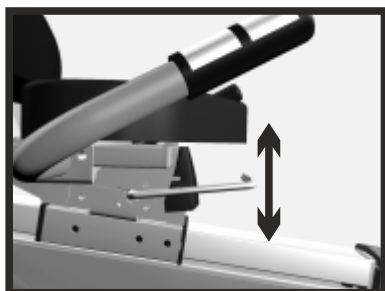


Illustration similar

How to find the optimal seating position:

Make sure you are wearing the shoes you want to wear during exercise. Comfortable running or sports shoes are ideal for this.

Adjust the pedal position so that the right pedal arm points horizontally forward, i.e. the right pedal is at the furthest point of its range of motion from the user.

Now sit on the seat and place the heel of your right foot on the right pedal. Your leg should now be almost fully extended. If this is not the case, adjust the height of the saddle until your right leg is almost fully extended in this position.

Now place the ball of your foot on the pedals. Your leg should now be slightly bent. This is the ideal training position.


⚠ CAUTION:

Never train with a sitting position in which your legs are fully extended at the furthest position of the pedals.

Levelling


Make sure that your exercise equipment is always level. In order to compensate for minor bumps or slopes, adjustable feet are fitted right and left on the front and rear stands and on the slide frame stand. To ensure that the device stands level, first turn all feet to the lowest position (position A). If necessary, adjust the feet so that the training device is level and stable.

If the adjustment range of the adjustable feet is not sufficient to allow level standing of the training device, please check the surface of the location. If necessary choose a different location where a safe and level position of the training device is ensured.

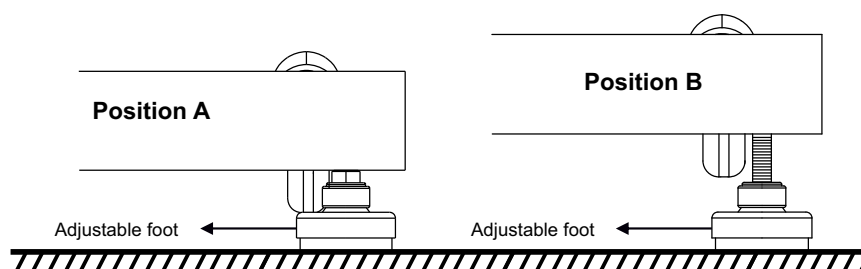

Transport

In order to transport your training device simply and safely, the front stand is equipped with transport rollers. To move the exerciser, stand in front of the handlebars and grab them with both hands. Pull the training device gently towards you and lower the handlebars until the rear stand no longer has contact with the ground and the main weight of the exerciser is resting on the transport rollers. Now you can simply pull the exercise machine along on the transport rollers and into the desired position. When lifting, transporting and positioning the device always make sure that you have a secure footing.

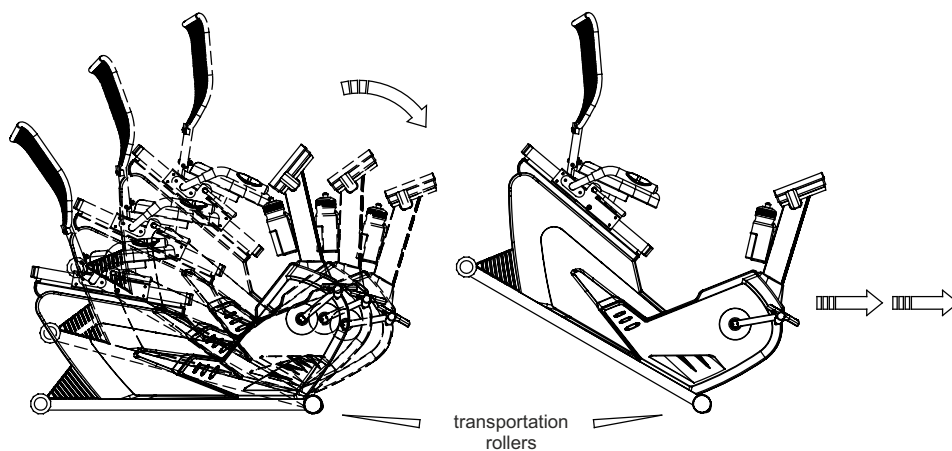

Location & storage

This training device was designed for exclusive use in dry, well-ventilated indoor areas. The use or storage in damp or wet areas, such as saunas, swimming pools, etc. and in outdoor areas, such as balconies, terraces, gardens, garages, etc. is excluded.

These locations may give rise to electronic defects, corrosion and rust due to the high humidity and low temperatures prevailing there. Under no circumstances will any claims for damages of this kind be accepted under the warranty.

Please choose a dry, level and warm place to store your training device. For your own sake, also make sure that you choose a training area which is sufficiently ventilated to ensure optimum oxygenation during training.

Before putting your training device back into operation after a long period of non-use, make sure that all fastenings are secure.

Care, Cleaning & Maintenance

WARNING

Before starting cleaning, maintenance and / or repair work, the exerciser must be completely disconnected from the power supply. This will only be the case if the power cable is disconnected from the power outlet and the exerciser. Therefore, first disconnect the power plug from the power outlet, and then disconnect the power cable from the exerciser. The mains cable may only be reconnected to the training device and the power supply when all work has been completed and the proper training condition of the device has been restored.

Cleaning

Clean your exerciser after each workout. Use a damp cloth and soap.

Never use solvents.

Regular cleaning contributes significantly to the preservation and longevity of your training device.

Damage caused by sweat or other liquids is not covered by the warranty under any circumstances. During training, make sure that no fluid can enter the exercise machine or the computer.

Maintenance

Sealed bearings are used in your training device, lubrication of the bearings is not required.

Checking the fastenings


Check tightness of nuts and bolts at least once a month and re-tighten them if necessary

Checking the components

Before each workout, check that the seat, seat support, handlebars and pedals are securely fastened.

WARNING:

Never train if one or more of these components are loose.

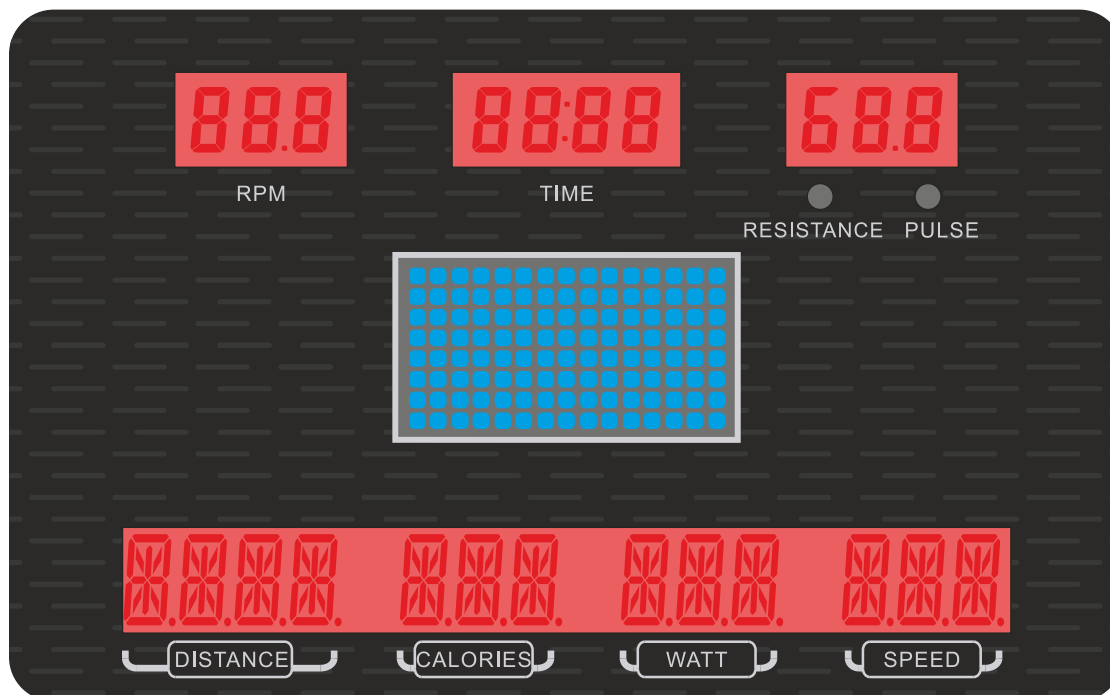

The cockpit constantly shows the current training values.

TIME

Specification of the training time. For a given training session, the computer counts down the time to "00:00." The training time can be set from "01:00" to "99:59" minutes.

DISTANCE

Specification of the training distance in kilometres. For a given training session, the computer counts down the distance back to "0.00." The training distance can be set from 1.0 to 99,99 Kilometres.

CALORIES*

Indication of energy consumption in Kcal. For a given calorie consumption, the computer counts the calories down to 0. The calorie consumption can be set from 10 to 999 calories.

Pulse or heart rate display - PULSE

When using the hand pulse sensors displays the current pulse value in beats per minute. When using an optional transmitter chest belt (not included) displays the current heart rate in beats / minute.

SPEED

Current speed in km / h.

Revolutions per minute - RPM

Specification of the current wheel revolution per minute (RPM).

Resistance - LEVEL

Display of the currently selected resistance level from 1 to 20.

Power - WATT**


Display of the power output in Watts.

* Warning about the calorie measurement

Energy consumption is calculated by means of a general formula. It is not possible to determine the exact energy consumption individually as this requires a large amount of personal data. The energy consumption displayed is approximate and not an exact value.

**Warning about the Watt display

Since this is a training device suitable for non-therapeutic purposes, the displayed value in Watts is not a calibrated value. The displayed power generated may differ from the actual power generated.

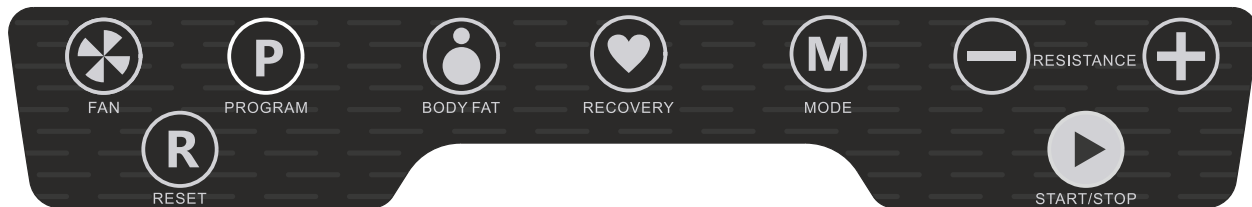

PROGRAM (P)

Button for selecting the different training programmes.

RECOVERY (R)

Recovery pulse measurement button

BODY FAT

Button for measuring the body fat percentage in %.

Minus/Plus - Keys

Before the training: Entering values

During the training: Changing the brake levels

MODE (M)

Key for confirming inputs

START/STOP

START function:

Pressing this button starts the selected training. If the training was interrupted (pause function), it is resumed by pressing this button again.

PAUSE function:

Pressing this button during the training pauses the current training.

RESET

Button for resetting all values to "zero"

Switching on the device

Shortly after the pedalling motion is started, the instrument panel switches on automatically.

Switching off the device

After the pedalling motion is finished, the device switches off automatically after a short time.

Quick-start function

After the pedalling motion has been started and the instrument panel has switched on, "PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears in the display. Now press the START/STOP button.

The training time starts automatically and you can begin training immediately.

Use the +/- buttons to enter the desired braking level from 1 to 20 and you can also change it at any time during the training.

Manual training (MANUAL P00)

Step 1: Programme selection

After you have started pedalling and the instrument panel has switched on, "P00" appears in the RPM window. PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears in the lower display. Now press the MODE button.

Step 2: Entering the user age

The lower display shows "USE LEVEL +/- KEYS TO ADJUST AGE". Then "AGE > 35" appears. Now enter your age with the +/- keys. Then press the MODE button.

Step 3: Entering the user weight

USE LEVEL +/- KEYS TO ADJUST WEIGHT" appears in the lower display. Then "WEIGHT > 70" appears. Now enter your weight with the +/- keys. Then press the MODE button.

Step 4: Setting the training target

You now have the option of setting three different training target values:

Step 4.1: Entering the training time

USE LEVEL +/- KEYS TO ADJUST TIME" appears in the lower display. The value "24:00" flashes in the TIME window. Now enter the desired training time with the +/- keys. Then press the MODE button.

Step 4.2: Entering the training distance

USE LEVEL +/- KEYS TO ADJUST DISTANCE" appears in the lower display. The value "5.00" flashes in the DISTANCE window. Now enter the desired training distance with the +/- keys. Then press the MODE button.

Step 4.2: Entering calorie consumption

USE LEVEL +/- KEYS TO ADJUST CALORIE" appears in the lower display. The value "200" flashes in the CALROIES window. Now enter the desired calorie consumption with the +/- keys. Then press the MODE button.

Step 5: Start training

PRESS START TO BEGIN OR MODE TO MODIFY" appears in the lower display.

Press the START/STOP button to start the workout.

With the +/- buttons you can select and change the load level from level 1 to 20 during the training.

The training ends automatically when the preset training target is reached.

Note: The user data is not saved with this programme.

Training profiles (PROGRAM P01 - P12)

Step 1: Programme selection

After you have started pedalling and the instrument panel has switched on, "P00" appears in the RPM window. PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears in the lower display.
Now press the PROGRAM button repeatedly until the desired training profile P01 to P12 is displayed in the RPM window. Now "PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears again in the lower display.
Press the MODE button.

Step 2: Entering the user age

The lower display shows "USE LEVEL +/- KEYS TO ADJUST AGE". Then "AGE > 35" appears.
Now enter your age with the +/- keys.
Then press the MODE button.

Step 3: Entering the user weight

USE LEVEL +/- KEYS TO ADJUST WEIGHT" appears in the lower display. Then "WEIGHT > 70" appears.
Now enter your weight with the +/- keys.
Then press the MODE button.

Step 4: Entering the training time

USE LEVEL +/- KEYS TO ADJUST TIME" appears in the lower display. The value "24:00" flashes in the TIME window.
Now enter the desired training time with the +/- keys.
Then press the MODE button.


Step 5: Start training

PRESS START TO BEGIN OR MODE TO MODIFY" appears in the lower display.
Press the START/STOP button to start the training.
Use the +/- buttons to change the load level during the training.


The training ends automatically when the preset training target is reached.

Note: The user data is not saved in this programme.


Program P1

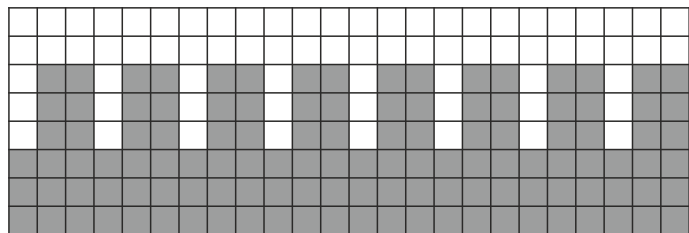


Program P4

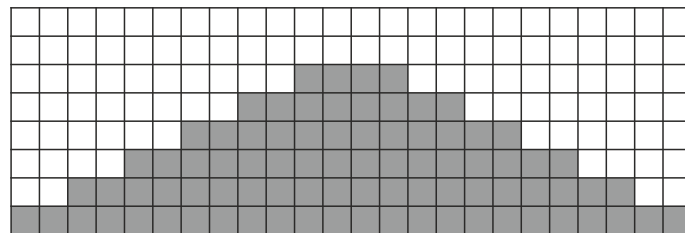


Program P2

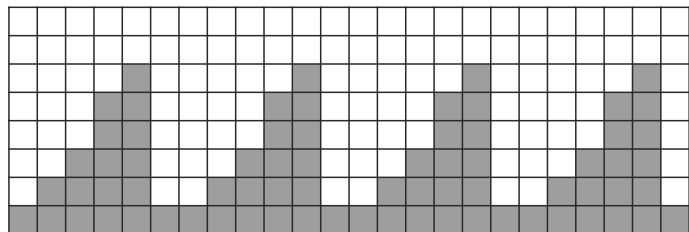


Program P5

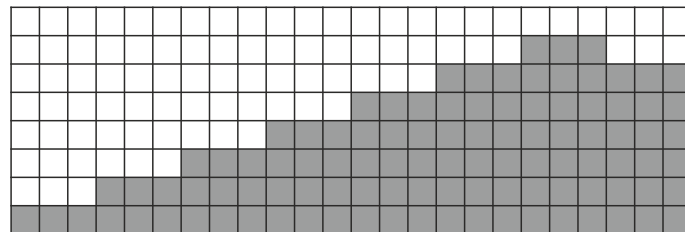

Program P3

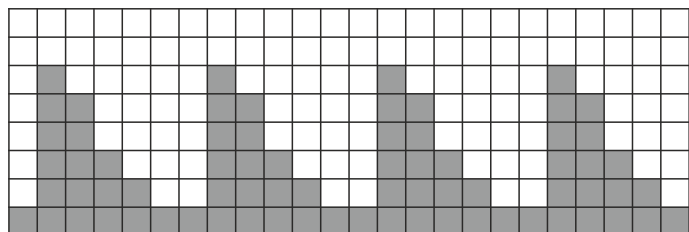


Program P6

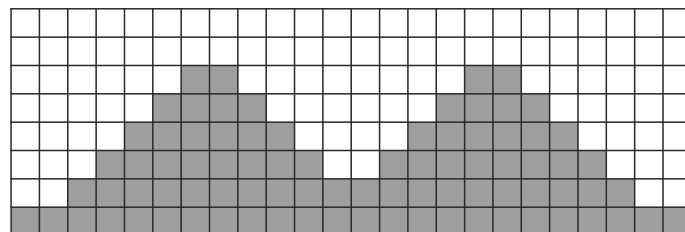


Cockpit


Program P7

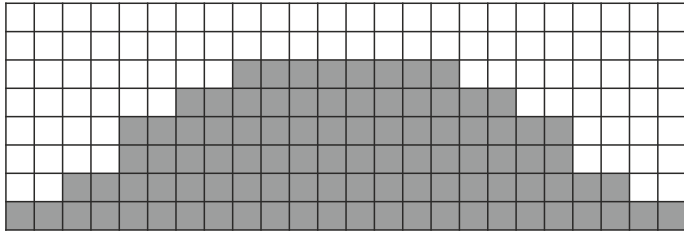


Program P10

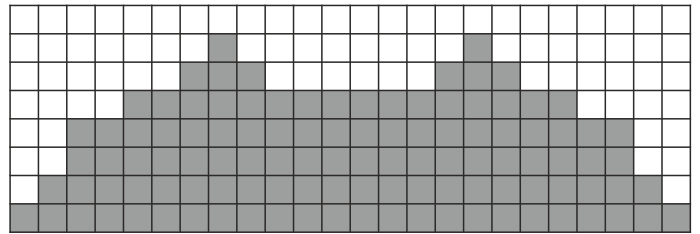


Program P8

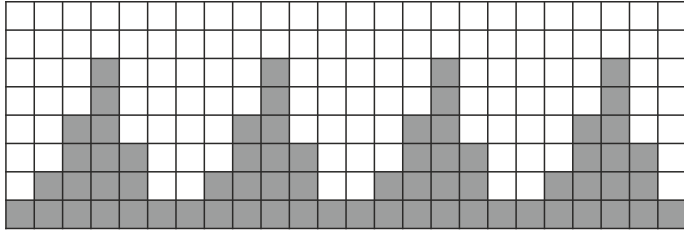


Program P11

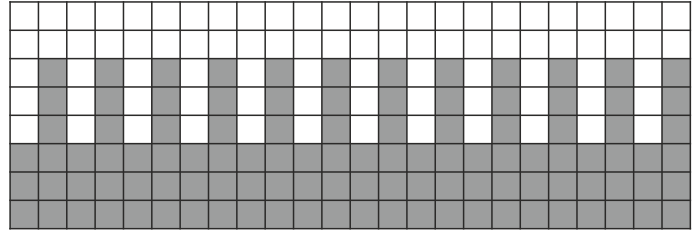

Program P9

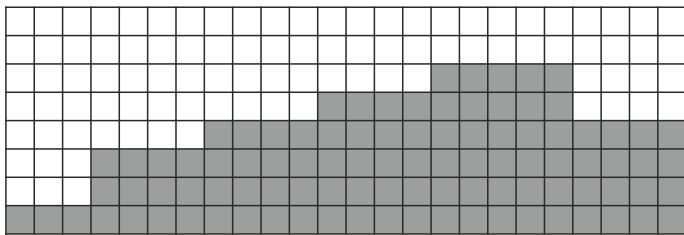

Program P12

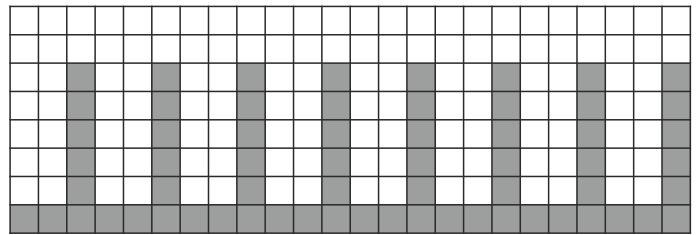

Own training profile (USER U01 - U04)

Step 1: Programme selection

After you have started pedalling and the instrument panel has switched on, "P00" appears in the RPM window. PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears in the lower display.

Now press the PROGRAM button repeatedly until the desired free memory location U01 to U04 is displayed in the RPM window. Now "PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears again in the lower display. Press the MODE button.

Step 2: Entering the user age

The lower display shows "USE LEVEL +/- KEYS TO ADJUST AGE". Then "AGE > 35" appears.

Now enter your age with the +/- keys.

Then press the MODE button.

Step 3: Entering the user weight

USE LEVEL +/- KEYS TO ADJUST WEIGHT" appears in the lower display. Then "WEIGHT > 70" appears.

Now enter your weight with the +/- keys.

Then press the MODE button.

Step 4: Entering the training time

USE LEVEL +/- KEYS TO ADJUST TIME" appears in the lower display. The value "10:00" flashes in the TIME window.

Now enter the desired training time with the +/- keys.

Then press the MODE button.

Step 5: Segment setting

The first segment of the training profile flashes. Enter the desired braking level from level 1 to 20 for this segment by pressing the +/- buttons. Confirm your entry by pressing the MODE button.

Now the second segment flashes. The training profile consists of 24 segments.

Edit all segments in the same way as described for segment 1.

Step 5: Start training

PRESS START TO BEGIN OR MODE TO MODIFY" appears in the lower display.

Press the START/STOP button to start the training.

Use the +/- buttons to change the load level during the training.

The training ends automatically when the set training target is reached.

The cockpit saves the created training profile, the user data and the preset training time.

To complete the profile again, select it as described in step 1 and then press the START button directly.

Heart Rate Controlled Training (H.R.C.)

These programmes are training programmes in which the cockpit regulates the braking resistance independently depending on the target heart rate defined by the user.

Since the cockpit is dependent on permanent and precise data transmission of the heart rate, the use of these programmes is only possible with a transmitter chest strap. This is not included in the scope of delivery.

- H1 60% Based on your age and the formula presented in the chapter "Heart rate measurement", the Cockpit calculates a target heart rate of 55%. heart rate measurement, the dashboard calculates a target heart rate of 55% of your maximum heart rate.
- H2 70% Based on your age and the formula presented in chapter "Heart rate measurement", the dashboard calculates a target pulse of the dashboard calculates a target heart rate of 75% of your maximum heart rate.
- H3 80% Based on your age and the formula presented in chapter "Heart rate measurement", the dashboard calculates a target pulse of calculates a target heart rate of 90% of your maximum heart rate.

Step 1: Programme selection

After you have started pedalling and the dashboard has switched on, "P00" appears in the RPM window. PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears in the lower display.

Now press the PROGRAM button repeatedly until the desired training profile ♥1 to ♥3 is displayed in the RPM window. Now "PRESS START FOR QUICKSTART OR MODE FOR SETUP" appears again in the lower display.

Press the MODE button.

Step 2: Entering the user age

The lower display shows "USE LEVEL +/- KEYS TO ADJUST AGE". Then "AGE > 30" appears.

Now enter your age with the +/- keys.

Then press the MODE button.

Step 3: Entering the user weight

USE LEVEL +/- KEYS TO ADJUST WEIGHT" appears in the lower display. Then "WEIGHT > 70" appears.

Now enter your weight with the +/- keys.

Then press the MODE button.

Step 4: Entering the training time

USE LEVEL +/- KEYS TO ADJUST TIME" appears in the lower display. The value "24:00" flashes in the TIME window.

Now enter the desired training time with the +/- keys.

Then press the MODE button.

Step 5: Entering the target heart rate

USE LEVEL +/- KEYS TO ADJUST PULSE" appears in the lower display. The target heart rate calculated by the dashboard flashes in the PULSE window. If you want to train with this value, press the MODE button directly. If you want to train with an individual target heart rate, enter the desired value with the +/- buttons. Then press the MODE button.

Step 6: Start training

PRESS START TO BEGIN OR MODE TO MODIFY" appears in the lower display.

Press the START/STOP button to start the training.

The training ends automatically when the set training target is reached.

If the dashboard does not receive heart rate values, a heart symbol and a question mark (♥?) appear in the large display.

If the dashboard receives correct values, two heart symbols (♥♥) are displayed in graphic alternation.

Note: The user data is not saved with this programme.

Body Fat Analysis & Body Mass Index (BMI)

In this programme, the computer determines the amount of fat in the body as a percentage of body weight.

Step 1: Programme selection

After you have started pedalling and the instrument panel has switched on, press the BODY FAT button.

Step 2: Entering the user gender

The lower display shows "USE LEVEL +/- KEYS TO ADJUST SEX". Then "SEX > MALE" appears.

Now enter your gender with the +/- keys. Here "MALE" stands for male and "FEMALE" for female users. Then press the MODE button.

Step 3: Entering the user age

USE LEVEL +/- KEYS TO ADJUST AGE" appears in the lower display. Then "AGE > 30" appears.

Now enter your age with the +/- keys. Then press the MODE button.

Step 4: Entering the user weight

USE LEVEL +/- KEYS TO ADJUST WEIGHT" appears in the lower display. Then "WEIGHT > 70" appears. Now enter your weight with the +/- keys. Then press the MODE button.

Step 4: Entering the user size

The lower display shows "USE LEVEL +/- KEYS TO ADJUST HEIGHT". Then "HEIGHT > 170" appears. Now enter your weight with the +/- keys. Then press the MODE button.

Step 5: Body fat analysis

After you have pressed the MODE button in step 4, "TESTING" appears in the lower display.

Now grasp the sensors of the hand pulse measurement. During the measurement, the time counts down and the pulse is displayed.

After successful measurement the result appears in the display.

Body fat analysis - body fat percentage

With this type of measurement, an electronic pulse is sent through the body via the hand sensors.

Since body fat is not or only very poorly conductive, the percentage of fat in the body is determined by means of the electrical resistance.

⚠ ATTENTION:

Please note that this form of measurement is an upper body measurement.

If you also have a scale with body fat analysis in parallel to this type of measurement, there may be discrepancies in the results when you compare the two measurements with each other.

The explanation for this is that a scale for body fat analysis is a lower body measurement and therefore the two measurement results cannot be compared.

Note: User data is not saved with this programme.

RECOVERY - Recovery pulse measurement

The recovery pulse measurement determines how quickly the heart recovers after exercise. The faster the pulse rate drops, the more trained the heart and circulation are. The difference between the exercise pulse and the recovery pulse indicates how quickly the heart recovers after exercise. At the end of your exercise programme, press the RECOVERY button. Hold the hand pulse sensors with both hands. If you wear a transmitter chest strap (available as an accessory) during exercise, grasping the hand pulse sensors is not necessary and may even lead to incorrect measurements. The dashboard counts down a 60-second countdown. After these 60 seconds have elapsed, your measurement result appears in the display.

F1 = very good


F2 = good

F3 = satisfactory

F4 = sufficient

F5 = poor

F6 = insufficient

 Heart Rate per Minute	200														
	150	195													
	130	146	190												
	110	127	143	185											
		107	124	139	180										
			105	120	135	175									
				102	117	131	170								
					99	114	128	165							
						96	111	124	160						
							94	107	120	155					
								91	104	116	150				
									88	101	113	145			
										85	98	109	140		
											83	94	105	135	
												80	91	101	100
													77	88	98
														74	85
															72
Age	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90

Calculating your personal heart rate when training

Calculate your personal heart rate when training as follows:

220 - Age = maximum heart rate

This value represents your maximum heart rate and serves as a basis from which to calculate your personal training heart rate. Set the calculated heart rate at 100%

Wellness and Health - target zones = 50 to 60% of the maximum heart rate.

This training zone is ideally suitable for people who are over-weight and/or older beginners, or people starting again after a longer break from training. Training in this zone the body will burn approx. 4-6 calories per minute to produce energy.

The percentage ratio per calorie is approx. 70% fat, 25% carbohydrate, and 5% protein.

Fat burning - target zone = 60 to 70% of the maximum heart rate

This training zone is suitable for athletes and sports people who aim to lose weight.

Training in this zone the body will burn approx. 6-10 calories per minute to produce energy.

The percentage rate per calorie is approx. 85% fat, 10% carbohydrate, and 5% protein.

Condition & Fitness - target zone = 70 to 80% of maximum heart rate

This training zone is ideally suitable for athletes and sports people who aim to improve their stamina and/or condition.

Training in this zone the body will burn approx. 10-12 calories per minute to produce energy.

The percentage rate per calorie is approx. 35% fat, 60% carbohydrate, and 5% protein.

For optimum effects in training results you should calculate the average value of the selected target zone (also see above table):

Wellness & Health - target zone average value = 55% of maximum heart rate

Fat burning - target zone average value = 65% of maximum heart rate

Kondition & Fitness - target zone average value = 75% of maximum heart rate

Warning about Pulse and Heart Rate Monitoring

CAUTION: Pulse and heart rate monitoring systems may be inaccurate. Excessive training can cause serious injury or even death. If you feel unwell and / or faint, stop training immediately. Make sure all users of your exercise device are familiar with this information, understand it and apply it unconditionally.

Pulse Rate Monitoring using Hand Sensors

Most exercise equipment is equipped with hand pulse sensors. These are mostly in the cockpit or integrated into the handrails. These hand sensors are used for short-term determination of the pulse rate. To do this, you need to cover the sensors with both hands at the same time. After a short while, the display shows the current pulse rate. This measuring system is based changes in electrical skin resistance measured by the hand sensors due to the heartbeat which causes blood pressure fluctuations. These changes are summarized to a mean value and shown in the display as the current pulse rate.

CAUTION.

For large parts of the population, the pulse-induced skin resistance change is so minimal that usable values cannot be derived from the measurement results. Also callouses on the palms, damp hands and body shakes, which in many forms of exercise inevitable, prevents correct measurement. In such cases, the pulse value is displayed incorrectly or not at all.

Please check in the case of a faulty or failed measurement, whether this occurs only with one or with several people. If the display of the pulse does not work only in individual cases, the device is not defective. In this case we recommend the use of a chest belt to achieve a permanently correct pulse display. This is available as an accessory

Heart Rate Measurement using a Chest Belt

Many MAXXUS® training devices are already fitted with a receiver as standard.

Using a chest belt (we recommend the exclusive use of an uncoded POLAR® chest strap) allows you to wirelessly measure heart rate. The chest belt is as accessories available.

This optimal, ECG-accurate type of measurement takes the heart rate by means of a transmitter chest belt directly from the skin.

The chest belt then sends the pulse via an electromagnetic field to the built-in cockpit receiver. We recommend you always use of a chest belt for heart rate measurement during heart rate-controlled programs.

CAUTION

The determination of the current heart rate by means of the chest belt serves only to display the current heart rate during exercise. This value says nothing about the safety and effectiveness of the training. Also, this type of measurement is in no way designed or suitable for medical diagnostic purposes.

Therefore, discuss with your family doctor the most suitable procedure for you and create your exercise plan before you start exercising.

This applies especially to those who:

- have not been physically active for a long period of time
- are overweight
- are older than 35 years
- have too high or too low blood pressure
- have heart problems

If you are wearing a pacemaker or similar device, discuss this with your medical specialist before using a heart rate chest belt.

Preparation Before Training

Before you start training make sure that not only your training device is in perfect condition, your body must also be prepared for training. Therefore, if you have not done any endurance training for some time, you should consult your GP and undergo a fitness check-up. Also discuss your training target; they will certainly be able to give you valuable advice and information. This applies to people who are over 35, have problems with overweight, heart or circulatory system problems.

Training Plan

Essential to effective, target orientated, and motivating training is to have a forward-looking training plan. Plan your fitness training as an integral part of your daily routine. If you don't have a fixed plan, training can easily interfere with regular commitments or continually be put off to another unspecified time.

If possible, create a long term monthly plan and not just from day to day or week to week. A training plan should also include sufficient motivation and distraction during training sessions. An ideal distraction is to watch TV during training as this diverts your attention both visually and acoustically. Make sure that you reward yourself and set realistic targets such as to losing 1 or 2kgs in four weeks or to increase your training time by 10 minutes within two weeks for example. If you reach your targets, then reward yourself with a favourite meal which you have not allowed yourself till then.

Warm-Up Before Training

Warm-up on your training device for 3-5 minutes at minimum resistance. This will best prepare your body for the up-coming exertion in training.

Cool-Down After Training

Do not just get off your training device immediately the training session is finished. Like with the warm-up stage you should continue for 3-5 minutes at minimum resistance to cool down. After training you should stretch your muscles thoroughly.



Front Thigh Muscles

Support yourself with your right hand against the wall or on your training device. Bend your knee and raise your left foot backwards so you can hold it with your left hand. Your knee should be pointing straight down to the floor. Pull your leg backwards until you feel a light pulling in your thigh muscles. Hold this position for 10 to 15 seconds. Let your foot go and stand it back on the floor. Repeat the exercise with your right leg.



Inner Thigh Muscles

Sit on the floor. Pull the soles of your feet together in front of you raising your knees slightly. Grasp the upper sides of your feet and place your elbows on your thighs. Press your thighs down towards the floor with your arms until you feel a light pulling in your thigh muscles. Hold this position for 10 to 15 seconds. Make sure to keep your upper body straight throughout the exercise. Release the pressure from your thighs and slowly stretch out your legs to the front. Stand up slowly steadily.



Legs, Calves and Buttocks

Sit on the floor. Stretch out your right leg and bend your left leg to place the sole of your foot on your right thigh. Bend your top body over so you can stretch out your right hand to touch your right toes. Hold this position for 10 to 15 seconds. Let go of your toes and sit slowly and steadily up straight again. Repeat this exercise with your left leg.



Leg and Lower Back Muscles

Sit on the floor with your legs stretched out. Stretch forward with your hands and try to grasp the tips of your toes with both hands. Hold this position for 10 to 15 seconds. Let go of your toes and slowly and steadily sit back up straight again.

Hydration

Adequate hydration is essential before and during exercise. During a training session of 30 minutes it is possible to lose up to 1 litre of liquid. To compensate for this fluid loss apple spritzer mixed in the ratio of one-third apple juice to two-thirds mineral water is ideal since it contains electrolytes and minerals to replace those that the body loses through sweat. You should drink about 330 ml 30 minutes before the beginning of your training session. Take care to maintain balanced hydration during the workout.

Training Frequency

Experts recommend that you do endurance training 3-4 days a week to keep the cardiovascular system fit. Of course, the more you train, the faster you will achieve your set training goal. Note however, that you should plan sufficient training breaks during your workout plan, to give your body enough time for rest and regeneration. After each training session you should take at least one day off. Also for that fitness and endurance training: Less is more!

Exercise Intensity

In addition to the mistake of exercising too often, mistakes are made in the intensity of the training. If your training goal is to train for a triathlon or marathon, your training intensity will certainly be high. But since most people have training goals such as weight reduction, cardiac / exercise training, improvement of physical condition, stress reduction, etc. to strive for, training intensity to meet these goals should be adjusted. It makes most sense to work with the appropriate heart rate for the respective training goal. The information on the heart rate and the corresponding table in this manual will help you further.

Duration of the individual training session

For optimal endurance or weight reduction training, the duration of the individual training session should be between 25 and 60 minutes. Beginners and returnees should start with a low training period of 10 minutes or less in the first week and then slowly increase week by week.

Training Documentation

In order to design and evaluate your training effectively, you should prepare yourself a training plan in written form or as a computer table before starting your training

Here you should document training session. Data, such as distance, training time, brake force setting and pulse values should be recorded as well as personal data, e.g. body weight, blood pressure, resting heart rate (measured morning immediately after waking up) and personal well-being during exercise.

Enclosed you will find a recommendation for a weekly plan.

Calendar Week: ____ Year: 20__						
Date	Day	Exercise duration	Exercise distance	Calorie consumption	Ø Heart rate	Comments
	Monday					
	Tuesday					
	Wednesday					
	Thursday					
	Friday					
	Saturday					
	Sunday					
Week Result:						

Technical Details

Cockpit

Display of:

- Time
- Speed
- Distance
- Revolutions per minute
- Calorie consumption
- Pulse Rate (when using the hand sensors)
- Watts
- Heart rate (when using an optional chest belt)
- Resistance level

Technical details:

Brake system:	Motor-controlled permanent magnetic brake system
Resistance levels:	1 to 20 levels, electronically adjustable
Drive type:	Two-stage longitudinal ribbed belt
Flywheel:	approx. 15 kg
Installation dimensions:	approx. 1.615 x 710 x 1.390 mm (LxWxH)
Total weight: approx.	75 kg
Maximum user weight:	150 kg
Controls:	via keyboard
Power supply:	Power generator
Temperature range:	10 ° to 30 ° for operation and storage

Application: Home use*, semi-professional use, professional use
suitable for non-therapeutic purposes

Disposal



Disposal

Never dispose of your training equipment in the normal household waste. All consumers are legally obliged to dispose of old appliances separately from household waste.

Dispose of the device only with a municipal or an authorised disposal company. Here the disposal of this device is free of charge. This is the only way to ensure that your old device is professionally disposed of and that negative effects on the environment will be avoided. Please observe the regulations which currently apply. If in doubt, please ask your local or municipal authorities for detailed information on how to dispose of your training device properly and in an environmentally sound manner.



Batteries / Re-chargeable Batteries (if present in the device)

According to the Batteries Directive, you as end user, are legally obliged to return all used batteries and re-chargeable batteries. **Disposal in normal household waste is an illegal offence.**

Most batteries already have the symbol to remind you of this regulation. In addition to this symbol the content of the heavy metals is also indicated. Such heavy metals must be disposed of in an environmentally sound manner. This means that all consumers are legally obliged to hand over used batteries and re-chargeable batteries to their local authority, at a municipal collection point or to return them to the retailer. If in doubt, please enquire at your municipal or local government authority on how to dispose of your batteries and rechargeable batteries properly and in an environmentally sound manner. You are also welcome to return your used batteries and rechargeable batteries to us at our head office or send them to us if sufficient postage is paid. On receipt we will dispose of them properly in accordance with the Batteries and Rechargeable Batteries Directive. Only return or dispose of batteries and rechargeable batteries when they are fully discharged.

My training device makes noises during training – is this normal?

Your MAXXUS® training device is equipped with high-quality ball-bearings and a grooved belt. In addition, it also has a high-quality magnetic braking system which is completely wear and friction free. All these extremely high-quality components ensure that all functional noises are very much reduced. Your MAXXUS® training device is one of the quietest products available in the fitness market. However, it is possible and normal that slight mechanical noises are noticeable during training. These mechanical noises, which either continually or sometimes occur at certain intervals are created by the very high rotational speed of the flywheel. Also, moving parts may generate sounds during training, which are amplified by the hollow metal tubes of the frame. It is also quite normal for running noise to get louder during your workout. This can be explained by an increase in training speed and by the device components heating up and expanding during training.

The cockpit does not show anything in the display when I turn it on.

Check if the control cable has been pinched or jammed during assembly and / or if the connector has come loose

The pulse rate value is not shown or is indicated incorrectly

Please refer to the „Pulse & Heart Rate Measurement” sections in this manual.

The hand pulse rate sensors are not functioning

Check if the hand sensor cables have been pinched or jammed during assembly.

The speed and distance values are indicated to be „0“ during training.

Check if the control cable has been pinched or jammed during assembly and/or if the connections have come loose.

My training device makes creaking noises during training.

Check if the training device is standing straight and flat on the ground. If not, re-adjust the foot stands. Check if the screws at the articulated joint between the pendulum tubes and the pedal arms are tightened securely.

My feet fall asleep during training.

The reason for this is often that training shoes are done up too tightly. Your feet will expand when you are under exertion and so you should do up your shoes more loosely. You can also get advice regarding this from sports shops or specialist running shoe shops.

Recommended Accessories

These accessories are best suited for use with your training device. All products are available from our online shop at www.maxxus.com.

POLAR® Transmitter Chest Belt T34 (uncoded)

Chest strap for determining the heart rate with optimized transmission ranges. Required accessory for the application of pulse-controlled programs and for continuous determination of the current heart rate.



MAXXUS® Floor Protection Mats

Due to its extreme density and material thickness of 0,5cm, these mats provide perfect protection for floors and floor coverings against damaging, scratches and soiling through body sweat. Noise caused by running and movement is significantly reduced.



Available in the following sizes:

- 160 x 90 cm
- 210 x 100 cm

MAXXUS® Degreaser Spray - Optimum cleaner for cleaning off dirt and maintaining the guide pipes and roller surfaces.




MAXXUS® Lubricating Spray – Optimum lubrication for guide pipes.

MAXXUS® Anti-Static Spray – Effective against the static charges created in frames, clothing and training computers. Devices which are located on carpets or synthetic floors will become statically charged. MAXXUS® Anti-Static Spray will deter this. Synthetic surfaces treated with MAXXUS® Anti-Static Spray do not attract dust as quickly and will remain clean for longer.



MAXXUS® Special Foam Cleaner – Use for regular cleaning of your training device. Plastic covers and metal frames can be easily cleaned and perfectly maintained with MAXXUS® Special Foam Cleaner. It is also suitable for cleaning pulse belts and other training accessories.

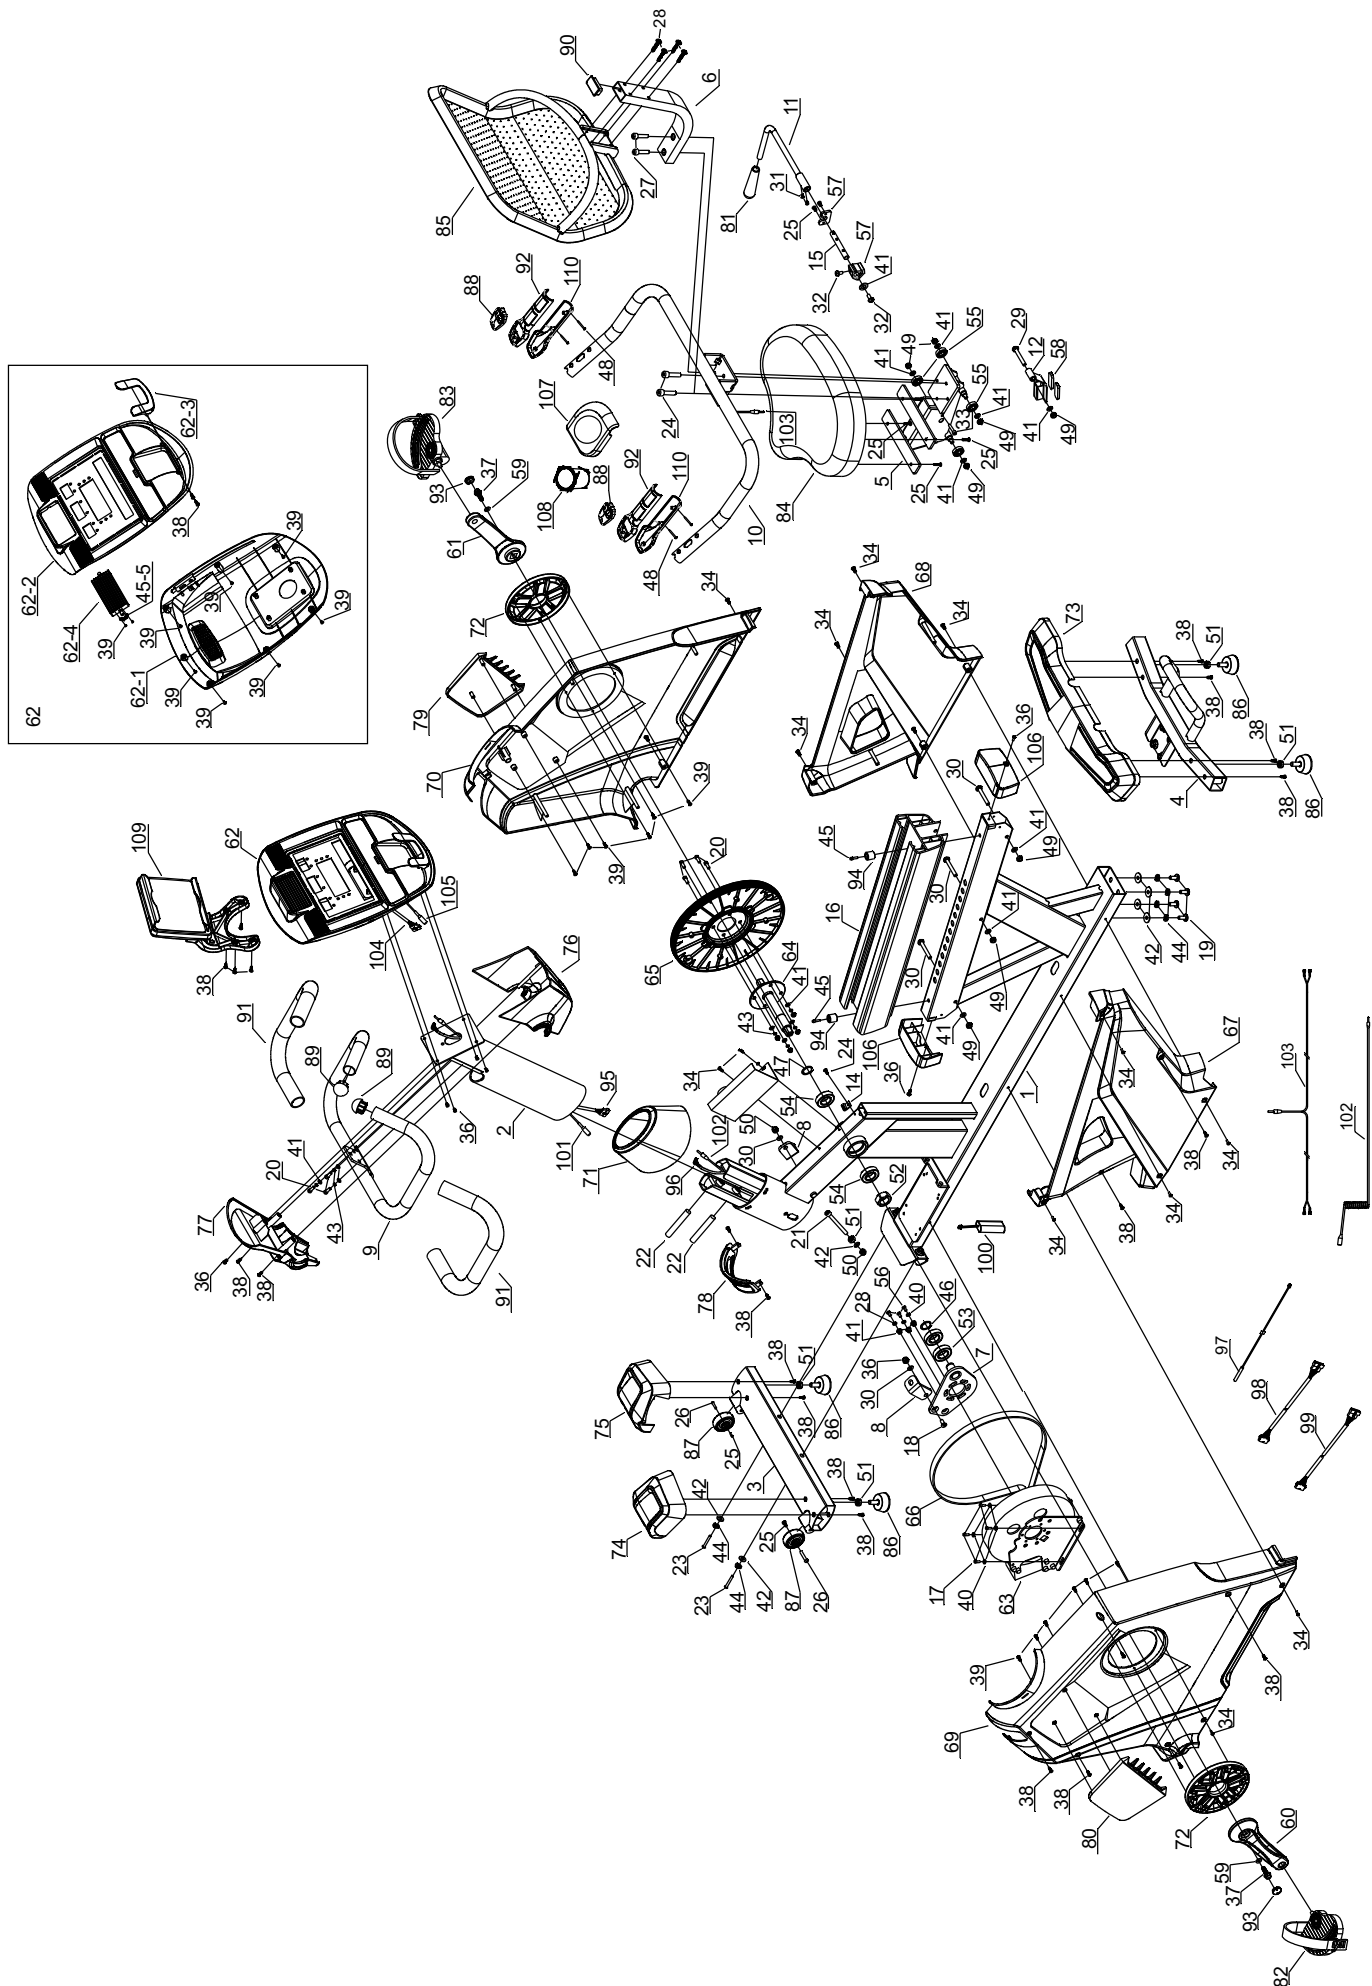

Teil	Beschreibung	Ausführung	Menge	Teil	Beschreibung	Ausführung	Menge
1	Main frame set		1	43	Spring washer	Ø8	7
2	Stand post		1	44	Spring washer	Ø10	6
3	Front stabilizer		1	45	Allen column full thread screw	M6×20	2
4	Rear stabilizer		1	46	Circlip for shaft	Ø20	1
5	Saddle connecting piece group		1	47	Circlip for shaft	Ø25	1
6	The back cushion adjustment group		1	48	Philips pan head full thread screw	ST3×30	4
7	Belt wheel set		2	49	Hex lock nut	M8	12
8	Adjusted screw piece		3	50	Hex lock nut	M10	1
9	Handle bar set		1	51	Hex nut	M10	5
10	Handle pulse		1	52	Hex nut	M24×P1.5	1
11	Brake adjustment bar		1	53	Deep groove ball bearing (PI)	6004ZZ	2
12	Brake Set		1	54	Deep groove ball bearing (PI)	6005ZZ	2
13	Brake fixed plate		1	55	Deep groove ball bearing (PI)	6001ZZ	4
14	Magnetic fixed mount		1	56	Belt compact powder	Ø13×Ø8.5×8.4	3
15	Brake axis		1	57	Brake block	33×34.5×28	1
16	Aluminum rails		1	58	Brake Pad	t5.5×19×46	2
17	Allen column full thread screw	M6×10	4	59	Flat washer-1	8612-07	2
18	Allen sunk head full thread screw	M10×25	1	60	Crank leg (L)		1
19	Allen C.K.S. full thread screw	M10×20	4	61	Crank leg (R)		1
20	Allen column full thread screw	M8×20	7	62	Console set		1
21	Allen column half thread screw	M10×130×35	1	62-1	Console cover (down)		1
22	Allen headless full thread screw	M12×70	2	62-2	Iphone holder		1
23	Allen C.K.S. half thread screw	M10×110×20	2	62-3	Ark clamp		2
24	Allen column full thread screw	M8×15	2	62-4	Console cover (upper)		1
25	Allen C.K.S. full thread screw	M6×15	10	62-5	Air outlet		1
26	Allen C.K.S. hollow screw	Ø8×33×M6×15	2	63	Self-generator set		1
27	Allen column full thread screw	M8×35	2	64	Belt pulley Axis set	Ø108×192	1
28	Allen C.K.S. full thread screw	M6×40	4	65	Belt pulley set(8500-49)	Ø308.9×22.2	1
29	Allen C.K.S. half thread screw	M8×55×20	1	66	Motor belt	480PJ8	1
30	Allen C.K.S. half thread screw	M8×60×20	3	67	Saddle cover (L)		1
31	Allen C.K.S. full thread screw	M6×10	2	68	Saddle cover (R)		1
32	Allen C.K.S. full thread screw	M6×10	2	69	Outer cover (L)		1
33	Allen column full thread screw	M8×35	1	70	Outer cover (R)		1
34	Philips C.K.S. sharp full thread screw	M5×15	12	71	Fixing cover		1
35	Philips sunk head thread screw	M5×20	3	72	Crank cover		2
36	Philips pan head full thread screw	M5×15	7	73	Rear stabilizer cover		1
37	Hex flange head full thread screw	5/16-18UNC-1	2	74	Front stabilizer (L)		1
38	Philips C.K.S. Self-tapping screw	ST4×16	24	75	Front stabilizer (R)		1
39	Philips C.K.S. Self-tapping screw	ST4×10	23	76	Handle bar front cover		1
40	Flat washer	Ø6	7	77	Handle bar rear cover		1
41	Flat washer	Ø8	16	78	Outer back cover		1
42	Flat washer	Ø10	6	79	Cover (R)		1

Teil	Beschreibung	Ausführung	Menge
80	Cover (L)		1
81	Brake adjustment bar (8010-24)		1
82	Pedal (L) (8020-21)		1
83	Pedal (R) (8020-22)		1
84	Saddle (8010-22)		1
85	Back cushion (8010-23)		1
86	Feet pad(8500-55)	Ø49×22×M10×26	4
87	wheel (8500-56)	Ø54.5×23.5	2
88	Tube plug(OMA-05-05-055)		2
89	Circle Tube plug	Ø32×t1.5	2
90	Square Tube plug	25×50×t1.5	1
91	Foam Grip	Ø29×t3.0×530	2
92	Handle pulse		2
93	Crank set cover		2
94	Saddle cushion block set	Ø20×20	2
95	Stand post communication wire	L-800mm	1
96	Main frame communication wire	L-800mm	1
97	Magnetic sensor		1
98	Brake wire	L-600mm	1
99	Magnetic wire	L-600mm	1
100	Battery		1
101	Stand post handle wire		1
102	Handle pulse wire-2		1
103	Handle pulse wire -4		1
104	Console wire		1
105	Console handle pulse wire		1
106	Alu rails plug		2
107	Bottle holder		1
108	Bottle		1
109	Ipad Holder		1
110	Hand pulse bottom cover		2

For MAXXUS Support Team to help you as quickly as possible with service, we will require certain information about your fitness device and about you. To find the exact spare parts required, we will need the product name, date of purchase and serial number.

If necessary, please fill out completely the Service Contract form attached to this User Manual and send it to us by post or you are welcome to use our online form "Service Contract" which you will find under the "Service" section at www.maxxus.com

Areas of Application & Warranty Periods

Depending on the model, fitness devices from MAXXUS are suitable for use in different areas. Find the appropriate area of use for your fitness device from the "Technical Data" in this User Manual.

Home Use:

Exclusively for private use
Warranty Period: 2 Years

Semi-Professional Use:

Use under instruction in hotels, physiotherapy practices, etc.
Use in a fitness studio or similar establishment is hereby excluded!
Warranty Period: 1 Year

Professional Use:

Use in a fitness studio or similar establishment under supervision by trained personnel.
Warranty Period: 1 Year
Use of your training device in an area which is not suitable for your device will cause immediate expiry of its guarantee and cancel your right to claim warranty!
Sole private use and warranty period of 2 years assumes that the purchase invoice is made out to the end user.

Proof of Purchase and Serial Number

To claim your right to service works within the warranty period we will in each case require proof of purchase. Keep your proof of purchase or purchase invoice in a safe place and in warranty cases send us a copy together with your Service Contract. This will ensure that we can process the service work as quickly as possible. So that we can identify which model version requires to be serviced correctly, we will require; Product Name, Serial Number and Date of Purchase.

Terms and Conditions of Warranty:

The warranty period for your training device starts on the date of purchase and applies solely to products which were purchased directly from the MAXXUS Group GmbH & Co KG or one of the MAXXUS Group GmbH & Co KG direct and authorised distribution partners.

The warranty covers defects caused by production or material faults and only apply to devices purchased in Germany. The warranty does not apply to damages or defects caused by culpable improper use, negligent or purposeful destruction, lack or failure to carry out maintenance and/or cleaning measures, force majeure, operational causes and to normal wear and tear, damages caused by penetration of liquids, damage caused by repairs or modifications made with spare parts from a different supplier. The warranty also does not apply for damages due to faulty assembly or damages which occur because of faulty assembly. Certain component parts will wear out during use or from normal wear and tear. This includes for example:

- Ball bearings ▪ Bearing bushings ▪ Bearings ▪ Drive belts ▪ Rollers
- Switches and push-buttons ▪ Treadmill belts (bands) ▪ Treadmill decks (running deck)

Signs of wear and tear on wearing parts are not items covered under the warranty.

For assistance with warranty service or warranty repair enquiries for devices not in Germany, please contact our Service Department at MAXXUS Group GmbH & Co KG by sending an Email to: service@maxxus.de and we will be happy to help.

Service Outside the Warranty and Ordering Spare Parts

The MAXXUS Service Team is happy to be of assistance to help solve any problems with faults which may arise following expiry of the warranty period, or in cases of defects arising which are not covered by the warranty.

In this case please contact us by email direct to:

service@maxxus.de

Orders for Spare Parts or Worn Parts should be sent along with information on the Product Name, spare part description and number and the quantity required to:

service@maxxus.de

Please be informed that additional fixing materials such as screws, bolts, washers etc are not included in the scope of delivery for individual spare parts. These should be ordered separately.

MAXXUS

Device Details

Product Name: **MAXXUS 90R PRO**Product Group: **Bike**

Serial Number: _____

Invoice Number: _____

Date of Purchase: _____

Where Purchased: _____

Accessories: _____

Type of Use:

☐ Private Use☐ Commercial Use

Personal Details

Company: _____

Contact Person: _____

First Name: _____

Second Name: _____

Street: _____

House Number: _____

Post Code / Town/City: _____

Country: _____

E-Mail: _____

Tel.No.: _____

Fax. No.*: _____

Mobile No.*: _____

* The fields marked with an asterisk are optional. The remaining fields are mandatory fields that must be completed.

Fault Description

Please enter a short description of the error as precisely as possible below:

(For example, when, where and how does the error occur? Frequency, after which period, at what Use, etc)

☐ A copy of the proof of purchase / invoice / receipt is attached.☐ I accept the General Terms and Conditions of MAXXUS Group GmbH & Co. KG.

I hereby instruct the company MAXXUS Group GmbH & Co. KG to repair the above defects. In Warranty cases I will not be charged for the cost. The costs for repairs which are excluded from liability for defects in quality will be charged to me and must be settled immediately. In cases of repairs carried out on site, our staff are entitled to collect payment. This agreement is confirmed with here with my signature.

_____	_____	_____
Date	Location	Signature

Please be aware that contracts can only be processed if this form has been completed in full. Be sure to attach a copy of your purchase invoice. Send the fully completed Service Contract to:

Post:** Maxxus Group GmbH & Co KG, Service Department, Nordring 80, D-64521 Gross-Gerau

E-Mail:** customerservice@maxxus.com

* Please stamp with sufficient postage – letters which are not sent postage paid will unfortunately not be accepted.

** Submission by E-Mail is only possible as a scanned document with original signature.

You are welcome to use our online form "Service Contract" which you will find under the "Service" section at www.maxxus.com

MAXXUS

LEADING BEYOND FITNESS



Maxxus Group GmbH & Co. KG

Nordring 80

D-64521 Gross-Gerau

Germany

E-Mail: info@maxxus.de

www.maxxus.com